

Definitions of Managed Objects for the  
Synchronous Optical Network/Synchronous Digital  
Hierarchy (SONET/SDH) Interface Type

Status of this Memo

This document specifies an Internet standards track protocol for the Internet community, and requests discussion and suggestions for improvements. Please refer to the current edition of the "Internet Official Protocol Standards" (STD 1) for the standardization state and status of this protocol. Distribution of this memo is unlimited.

Copyright Notice

Copyright (C) The Internet Society (2003). All Rights Reserved.

Abstract

This memo defines a portion of the Management Information Base (MIB) for use with network management protocols in TCP/IP-based internets. In particular, it defines objects for managing Synchronous Optical Network/Synchronous Digital Hierarchy (SONET/SDH) interfaces. This document is a companion to the documents that define Managed Objects for the DS1/E1/DS2/E2 and DS3/E3 Interface Types.

This memo replaces RFC 2558. Changes relative to RFC 2558 are summarized in the MIB module's REVISION clause.

Table of Contents

1. Conventions .....	2
2. The Internet-Standard Management Framework .....	3
3. Overview .....	3
3.1. Use of the ifTable .....	3
3.2. Use of ifTable for SONET/SDH Medium/Section/Line Layer .....	5
3.3. Use of ifTable for SONET/SDH Paths .....	6
3.4. Use of ifTable for SONET/SDH VTs/VCs .....	7
3.5. SONET/SDH Terminology .....	7
4. Object Definitions .....	15
4.1. The SONET/SDH Medium Group .....	19
4.2. The SONET/SDH Section Group .....	23

4.2.1.	The SONET/SDH Section Current Group .....	23
4.2.2.	The SONET/SDH Section Interval Group .....	25
4.3.	The SONET/SDH Line Group .....	28
4.3.1.	The SONET/SDH Line Current Group .....	28
4.3.2.	The SONET/SDH Line Interval Group .....	30
4.4.	The SONET/SDH Far End Line Group .....	32
4.4.1.	The SONET/SDH Far End Line Current Group .....	32
4.4.2.	The SONET/SDH Far End Line Interval Group .....	34
4.5.	The SONET/SDH Path Group .....	37
4.5.1.	The SONET/SDH Path Current Group .....	37
4.5.2.	The SONET/SDH Path Interval Group .....	39
4.6.	The SONET/SDH Far End Path Group .....	42
4.6.1.	The SONET/SDH Far End Path Current Group .....	42
4.6.2.	The SONET/SDH Far End Path Interval Group .....	44
4.7.	The SONET/SDH Virtual Tributary Group .....	46
4.7.1.	The SONET/SDH VT Current Group .....	46
4.7.2.	The SONET/SDH VT Interval Group .....	49
4.8.	The SONET/SDH Far End VT Group .....	51
4.8.1.	The SONET/SDH Far End VT Current Group .....	51
4.8.2.	The SONET/SDH Far End VT Interval Group .....	53
4.9.	Conformance Information .....	56
4.10.	Compliance Statements .....	56
5.	Acknowledgments .....	65
6.	Security Considerations .....	65
7.	References .....	66
7.1.	Normative References .....	66
7.2.	Informative References .....	68
8.	Intellectual Property Statement .....	68
Appendix A:	The delay-line approach to statistics collection .....	69
Appendix B:	RFC 1595 SES interpretation .....	71
Author's Address	.....	72
Full Copyright Statement	.....	73

## 1. Conventions

The key words "MUST", "MUST NOT", "REQUIRED", "SHALL", "SHALL NOT", "SHOULD", "SHOULD NOT", "RECOMMENDED", "NOT RECOMMENDED", "MAY", and "OPTIONAL", when they appear in this document, are to be interpreted as described in BCP 14, RFC 2119 [RFC2119].

## 2. The Internet-Standard Management Framework

For a detailed overview of the documents that describe the current Internet-Standard Management Framework, please refer to section 7 of RFC 3410 [RFC3410].

Managed objects are accessed via a virtual information store, termed the Management Information Base or MIB. MIB objects are generally accessed through the Simple Network Management Protocol (SNMP). Objects in the MIB are defined using the mechanisms defined in the Structure of Management Information (SMI). This memo specifies a MIB module that is compliant to the SMIV2, which is described in STD 58, RFC 2578 [RFC2578], STD 58, RFC 2579 [RFC2579] and STD 58, RFC 2580 [RFC2580].

Textual conventions used in this document are defined in RFC 2579 [RFC2579] and RFC 3593 [RFC3593].

## 3. Overview

These objects are used when the particular media being used to realize an interface is a SONET/SDH interface. At present, this applies to these values of the ifType variable in the Internet-standard MIB:

sonet (39), sonetPath (50), sonetVT (51)

The definitions contained herein are based on the SONET/SDH specifications in ANSI T1.105 and T1.106-1988 [T1.105a][T1.105b][T1.106] and CCITT G.707, 708, 709, and G.783 [G.707][G.708][G.709][G.783].


### 3.1. Use of the ifTable

This section specifies how the MIB II interfaces group, as defined in [RFC2863], is used for SONET/SDH interfaces. The SONET/SDH layers support several multiplexing possibilities.

For example in SONET, an Synchronous Transport Signal 3 (STS-3) has 3 SONET Paths, and a STS-3c has 1 SONET Path. Another example could be a STS-12 having 4 SONET STS-3c Paths. Similarly, a SONET Synchronous Payload Envelope (SPE) can carry many Virtual Tributaries (VTs), for example, one SONET SPE can carry 28 VT1.5s. It is important to note that an SPE and a VT in SONET is collectively referred to as a Virtual Container (VC) in SDH. Also, an STS is called Synchronous Transport Module (STM) in SDH.

Not all SONET/SDH equipment terminates all SONET/SDH layers. For example, a SONET/SDH STE regenerator terminates SONET/SDH Sections only, and is transparent for all layers above that. SONET/SDH Add-Drop multiplexers and Digital Cross Connect Systems terminate SONET/SDH Lines. SONET/SDH Terminal Multiplexers may also terminate SONET/SDH Paths and VTs/VCs.

MIB II [RFC1213], as extended by [RFC2863], accommodates these cases by appropriate use of the MIB II system group, and the interfaces group. The system group can name and describe the type of managed resource. The interfaces group defines which SONET/SDH layers apply, how these layers are configured and multiplexed. This is achieved by proper representation of SONET/SDH Layers by ifEntries as defined in [RFC2863], as follows:

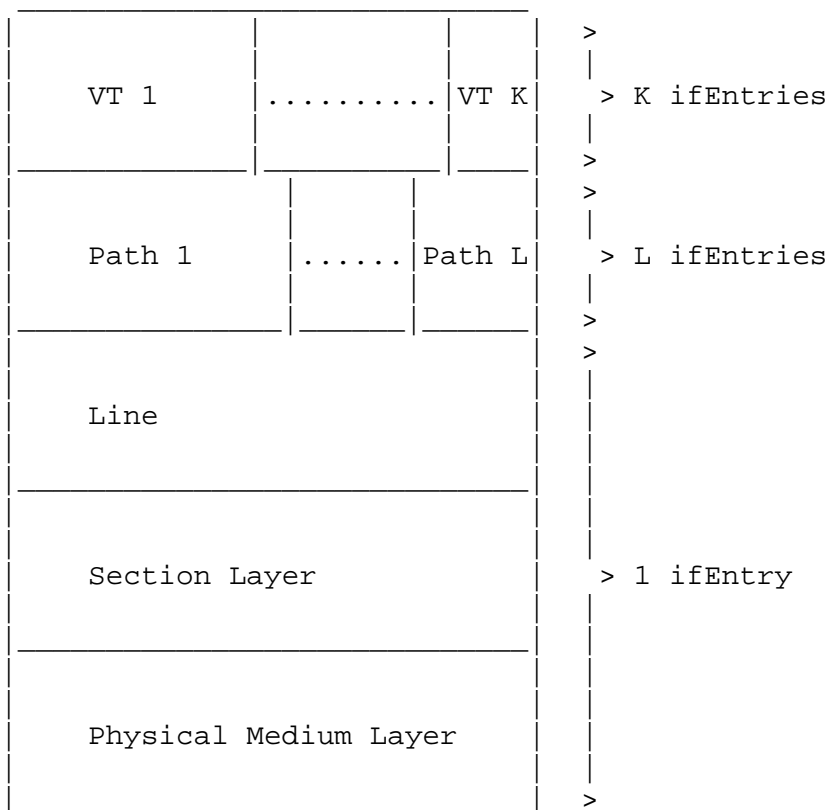

Use of ifTable for a SONET/SDH port

The exact configuration and multiplexing of the layers is maintained in the ifStackTable [RFC2863] and in the ifInvStackTable [RFC2864].

### 3.2. Use of ifTable for SONET/SDH Medium/Section/Line Layer

Only the ifGeneralInformationGroup needs to be supported.

ifTable Object      Use for combined SONET/SDH  
Medium/Section/Line Layer

=====	
ifIndex	Interface index.
ifDescr	SONET/SDH Medium/Section/Line
ifType	sonet(39)
ifSpeed	Speed of line rate for SONET/SDH, (e.g., 155520000 bps).
ifPhysAddress	The value of the Circuit Identifier. If no Circuit Identifier has been assigned this object should have an octet string with zero length.
ifAdminStatus	May be implemented with read-only access. The desired administrative status of the interface.
ifOperStatus	The value testing(3) is not used. This object assumes the value down(2), if the objects sonetSectionCurrentStatus and sonetLineCurrentStatus have any other value than sonetSectionNoDefect(1) and sonetLineNoDefect(1), respectively.
ifLastChange	sysUpTime at the last change in ifOperStatus.
ifName	Textual name of the interface or an OCTET STRING of zero length.
ifLinkUpDownTrapEnable	Default value is enabled(1). May be implemented with read-only access.
ifHighSpeed	Speed of line in Mega-bits per second (e.g., 155 Mbps)
ifConnectorPresent	Set to true(1).
ifAlias	The (non-volatile) alias name for this interface as assigned by the network manager.

### 3.3. Use of ifTable for SONET/SDH Paths

Only the ifGeneralInformationGroup needs to be supported.

ifTable Object	Use for SONET/SDH Paths
ifIndex	Interface index.
ifDescr	SONET/SDH Path
ifType	sonetPath(50)
ifSpeed	set to speed of SONET/SDH path (e.g., an STS-1 path has a rate of 50112000 bps.)
ifPhysAddress	Circuit Identifier or OCTET STRING of zero length.
ifAdminStatus	May be implemented with read-only access. The desired administrative status of the interface.
ifOperStatus	This object assumes the value down(2), if the object sonetPathCurrentStatus has any other value than sonetPathNoDefect(1).
ifLastChange	sysUpTime at the last change in ifOperStatus.
ifName	Textual name of the interface or an OCTET STRING of zero length.
ifLinkUpDownTrapEnable	Default value is disabled(2). May be implemented with read-only access.
ifHighSpeed	Set to rate of SONET/SDH path in Mega-bits per second.
ifConnectorPresent	Set to false(2).
ifAlias	The (non-volatile) alias name for this interface as assigned by the network manager.

### 3.4. Use of ifTable for SONET/SDH VTs/VCs

Only the ifGeneralInformationGroup needs to be supported.

ifTable Object      Use for SONET/SDH VTs/VCs

=====

ifIndex	Interface index.
ifDescr	SONET/SDH VT/VC
ifType	sonetVT(51)
ifSpeed	Set to speed of VT/VC (e.g., a VT1.5 has a rate of 1728000 bps.)
ifPhysAddress	Circuit Identifier or OCTET STRING of zero length.
ifAdminStatus	May be implemented with read-only access. The desired administrative status of the interface.
ifOperStatus	This object assumes the value down(2), if the object sonetVTCurrentStatus has any other value than sonetVTNoDefect(1).
ifLastChange	sysUpTime at the last change in ifOperStatus.
ifName	Textual name of the interface or an OCTET STRING of zero length.
ifLinkUpDownTrapEnable	Default value is disabled(2). May be implemented with read-only access.
ifHighSpeed	Set to rate of VT in Mega-bits per second.
ifConnectorPresent	Set to false(2).
ifAlias	The (non-volatile) alias name for this interface as assigned by the network manager.

### 3.5. SONET/SDH Terminology

The terminology used in this document to describe error conditions on a SONET circuit as monitored by a SONET system are from the T1.231 [T1M1.3][T1.231a][T1.231b]. The terminology used in this document to describe error conditions on a SDH circuit as monitored by a SDH system are from the CCITT G.783 [G.783]. Only the SONET Performance

Monitoring terminology is defined in this document. The definitions for SDH Performance Monitoring terms are similar but not identical, and they can be found in [G.783]. If the definition in this document does not match the definition in the T1.231 document, the implementer should follow the definition described in this document. In some cases other or additional references are used as compared with the ones cited above. This will be indicated in the text.

**Section Loss Of Frame Failure (Out of Frame Event, Severely Errored Frame Defect)** An Out of Frame (OOF) event (or Severely Errored Frame defect) is the occurrence of four contiguous errored frame alignment words. A frame alignment word occupies the A1 and A2 bytes of an STS frame, and is defined in T1.105. The SEF defect is terminated when two contiguous error-free frame words are detected. Any implementation of the frame recovery circuitry which achieves realignment following an OOF within the 250 microsecond (two frames) interval implied by this definition is acceptable.

A Loss of Frame (LOF) defect is declared when an OOF/SEF defect persists for a period of 3 milliseconds. The LOF defect is terminated when the incoming signal remains continuously in-frame for a period of 1 ms to 3 ms.

A LOF failure is declared when the LOF defect persists for a period of 2.5 +/- 0.5 seconds, except when an LOS defect or failure is present. The LOF failure is cleared when the LOS failure is declared, or when the LOF defect is absent for 10 +/- 0.5 seconds.

#### Loss of Signal

The Loss of Signal (LOS) defect is declared when no transitions are detected on the incoming signal (before descrambling). The LOS defect is detected upon observing 2.3 to 100 microseconds of no transitions. The LOS defect is cleared after a 125 microsecond interval (one frame) during which no LOS defect is detected.

The LOS failure is declared when the LOS defect persists for a period of 2.5 +/- 0.5 seconds, or if LOS defect is present when the criteria for LOF failure declaration have been met. The LOS failure is cleared when the LOS defect is absent for a period of 10 +/- 0.5 seconds. Declaration of LOS failure clears any existing LOF failure. Clearing the LOS failure allows immediate declaration of the LOF failure if conditions warrant.



#### STS-Path Loss of Pointer

A Loss of Pointer (LOP) defect is declared when either a valid pointer is not detected in eight consecutive frames, or when eight consecutive frames are detected with the New Data Flag (NDF) set to "1001" without a valid concatenation indicator (see ANSI T1.105). A LOP defect is terminated when either a valid pointer with a normal NDF set to "0110", or a valid concatenation indicator is detected for three contiguous frames. Incoming STS-Path AIS shall not result in the declaration of a LOP defect.

An STS-Path LOP failure is declared when the STS-Path LOP defect persists for a period of 2.5 +/- 0.5 seconds. A STS-Path LOP failure is cleared when the STS-Path LOP defect is absent for 10 +/- 0.5 seconds.

#### VT Loss of Pointer

A VT LOP defect is declared when either a valid pointer is not detected in eight consecutive VT superframes, or when eight consecutive VT superframes are detected with the NDF set to "1001" without a valid concatenation indicator. A VT LOP defect is terminated when either a valid pointer with a normal NDF set to "0110", or a valid concatenation indicator is detected for three contiguous VT superframes. Incoming VT-Path AIS shall not result in declaring a VT LOP defect.

A VT LOP failure is declared when the VT LOP defect persists for 2.5 +/- 0.5 seconds. A VT LOP failure is cleared when the VT LOP defect is absent for 10 +/- 0.5 seconds.

#### Line Alarm Indication Signal

A Line Alarm Indication Signal (L-AIS) is defined in ANSI T1.105. The following criteria are specific to the L-AIS defect:

- Line AIS defect is detected as a "111" pattern in bits 6, 7, and 8 of the K2 byte in five consecutive frames.
- Line AIS defect is terminated when bits 6, 7, and 8 of the K2 byte do not contain the code "111" for five consecutive frames.

A Line AIS failure is declared when the Line AIS defect persists for a period of 2.5 +/- 0.5 seconds. A Line AIS failure is cleared when the Line AIS defect is absent for 10 +/- 0.5 seconds.

#### STS-Path Alarm Indication Signal

The STS-Path Alarm Indication Signal (AIS) is defined in ANSI T1.105 as all ones in bytes H1, H2, and H3 as well as all ones in the entire STS SPE. The following criteria are specific to the STS-Path AIS defect:

- STS-Path AIS defect is detected as all ones in bytes H1 and H2 in three contiguous frames.
- The STS-Path AIS defect is terminated when a valid STS Pointer is detected with the NDF set to "1001" (inverted) for one frame, or "0110" (normal) for three contiguous frames.

An STS-Path AIS failure is declared when the STS-Path AIS defect persists for 2.5 +/- 0.5 seconds. An STS-Path AIS failure is cleared when the STS-Path AIS defect is absent for 10 +/- 0.5 seconds.

#### VT-Path Alarm Indication Signal

The VT-Path Alarm Indication Signal (AIS) is only applicable for VTs in the floating mode of operation. VT-Path AIS is used to alert the downstream VT Path Terminating Entity (PTE) of an upstream failure. Upon detection of a failure, Line AIS, or STS-Path AIS, an STS PTE will generate downstream VT-Path AIS if the STS Synchronous Payload Envelope (SPE) is carrying floating VTs. VT-Path AIS is specified in ANSI T1.105 as all ones in bytes V1, V2, V3, and V4, as well as all ones in the entire VT SPE. The following criteria are specific to VT-Path AIS defect:

- VT-Path AIS defect is detected by a VT PTE as all ones in bytes V1 and V2 in three contiguous VT superframes.
- VT-Path AIS defect is terminated when valid VT pointer with a valid VT size is detected with the NDF set to "1001" (inverted) for one VT superframe, or "0110" (normal) for three contiguous VT superframes are detected.

A VT-Path AIS failure is declared when the VT-Path AIS defect persists for 2.5 +/- 0.5 seconds. A VT-Path AIS failure is cleared when the VT-Path AIS defect is absent for 10 +/- 0.5 seconds.

#### Line Remote Defect Indication

Line Remote Defect Indication (RDI) (aka Line FERF) signal is the occurrence of a "110" pattern in bit positions 6, 7, and 8 of the K2 byte in STS-1 #1 of the STS-N signal. Line RDI is defined in ANSI T1.105. The following criteria are specific to Line RDI defect:

- Line RDI defect is a "110" code in bits 6, 7, and 8 of the K2 byte of in STS-1 #1 in x consecutive frames, where x = 5 [T1.231a][T1.231b] or 10 [T1.231b].

- Line RDI defect is terminated when any code other than "110" is detected in bits 6, 7, and 8 of the K2 byte in x consecutive frames, where x = 5 [T1.231a][T1.231b] or 10 [T1.231b].

A Line Remote Failure Indication (RFI) failure is declared when the incoming Line RDI defects lasts for 2.5 +/- 0.5 seconds. The Line RFI failure is cleared when no Line RDI defects are detected for 10 +/- 0.5 seconds.

#### STS-Path Remote Defect Indication

STS-Path RDI (aka STS-Path FERF) signal shall be generated within 100 milliseconds by the STS PTE upon detection of an AIS or LOP defect. Transmission of the STS-Path RDI signal shall cease within 100 milliseconds when the STS PTE no longer detects STS-Path AIS or STS-Path LOP defect. The STS-Path RDI shall accurately report the presence or absence of STS-Path AIS or STS-Path LOP defects. STS-Path RDI defect is defined in ANSI T1.105. The following requirements are specific to the STS-Path RDI defect:

- STS-Path RDI is detected by all STS PTEs. STS-Path RDI is detected by the upstream STS PTE as a "1" in bit five of the Path Status byte (G1) for x consecutive frames, where x = 5 [T1.231a] or 10 [T1.231b].
- Removal of STS-Path Remote Defect Indication is detected by a "0" in bit 5 of the G1 byte in x consecutive frames, where x = 5 [T1.231a] or 10 [T1.231b].

An STS-Path Remote Failure Indication (RFI) failure is declared when the incoming STS-Path RDI defects lasts for 2.5 +/- 0.5 seconds. The STS-Path RFI failure is cleared when no STS-Path RDI defects are detected for 10 +/- 0.5 seconds.

#### VT-Path Remote Defect Indication

VT Path RDI (aka VT Path FERF) signal shall be generated within 100 milliseconds by the VT PTE upon detection of a VT-Path AIS or LOP defect. Transmission of the VT-Path RDI signal shall cease within 100 milliseconds when the VT PTE no longer detects VT-Path AIS or VT-Path LOP defect. The VT-Path RDI shall accurately report the presence or absence of VT-Path AIS or VT-Path LOP defects. VT-Path RDI defect is defined in ANSI T1.105. The following requirements are specific to VT-Path RDI defect:

- VT-Path RDI defect is the occurrence of a "1" in bit 4 of the VT-Path Overhead byte (V5) in x consecutive frames, where x = 5 [T1.231a] or 10 [T1.231b].

- VT-Path RDI defect is terminated when a "0" is detected in bit 4 of the VT-Path Overhead byte (V5) for x consecutive frames, where x = 5 [T1.231a] or 10 [T1.231b].

A VT-Path Remote Failure Indication (RFI) (derived) failure is declared when the incoming VT-Path RDI defects lasts for 2.5 +/- 0.5 seconds. The VT-Path RFI failure is cleared when no VT-Path RDI defects are detected for 10 +/- 0.5 seconds.

#### VT-Path Remote Failure Indication

The VT-Path RFI signal is only required for the case of byte synch mapped DS1s where the DS1 frame bit is not mapped. The VT-Path RFI is specified in ANSI T1.105, where it is currently called VT path yellow. When provided, the VT-Path RFI signal is used to indicate the occurrence of far-end failures. When the VT-Path RFI is not provided, far-end failures are derived from local timing of the VT-Path RDI defect. The VT-Path RFI failure is declared within 5 ms of detecting the incoming VT-Path RFI Signal. The VT-Path Remote Failure Indication (RFI) failure is cleared within 50 ms of detecting the removal of the incoming VT-Path RFI signal.

#### Coding Violation

Coding Violations (CV) are Bit Interleaved Parity (BIP) errors that are detected in the incoming signal. CV counters are incremented for each BIP error detected. That is, each BIP-8 can detect up to eight errors per STS-N frame, with each error incrementing the CV counter. Section CVs shall be collected using the BIP-8 in the B1 byte located in the Section Overhead of STS-1 #1. Line CVs shall be collected using the BIP-8s in B2 bytes located in the Line Overhead of each STS-1 (since all CVs on an STS-N line are counted together, this is equivalent to counting each error in the BIP-8\*N contained in the B2 bytes of the STS-N Line Overhead). Thus, on an STS-N signal, up to 8 x N CVs may occur in each frame. Path CVs shall be collected using the BIP-8 in the B3 byte of the STS-Path Overhead of the STS SPE. VT CVs shall be collected using the BIP-2 in the V5 overhead byte of the floating VT.

#### Errored Seconds

At each layer, an Errored Second (ES) is a second with one or more Coding Violations at that layer OR one or more incoming defects (e.g., SEF, LOS, AIS, LOP) at that layer has occurred.

#### Severely Errored Seconds

According to [T1M1.3][T1.231a][TR253][GR253][T1.231b] at each layer, an Severely Errored Second (SES) is a second with x or more CVs at that layer, or a second during which at least one or more incoming defects at that layer has occurred. The values of x in

RFC 1595 [RFC1595] were based on [T1M1.3] and [TR253] (see Appendix B). These values have subsequently been relaxed in [T1.231a][GR253][T1.231b]. In addition, according to G.826 [G.826] SESSs are measured as a percentage of errored blocks.

To deal with these sets of definitions this memo defines an object `sonetSESthresholdSet` that determines the correct interpretation of SES. For backward compatibility, if this object is not implemented the interpretation of Appendix B shall apply. Otherwise, a more recent interpretation is suggested. An agent is not required to support all sets of definitions.

Note that CV counts should be frozen during SESSs.

Note that if a manager changes the value of this object all SES statistics collected prior to this change shall be invalidated.

#### Severely Errored Framing Seconds

A Severely Errored Framing Second (SEFS) is a second containing one or more SEF events. This counter is only counted at the Section Layer.

#### Unavailable Seconds

At the Line, Path, and VT layers, an unavailable second is calculated by counting the number of seconds that the interface is unavailable. At each layer, the SONET/SDH interface is said to be unavailable at the onset of 10 contiguous SESSs. The 10 SESSs are included in unavailable time. Once unavailable, the SONET/SDH interface becomes available at the onset of 10 contiguous seconds with no SESSs. The 10 seconds with no SESSs are excluded from unavailable time. With respect to the SONET/SDH error counts at each layer, all counters at that layer are incremented while the SONET/SDH interface is deemed available at that layer. While the interface is deemed unavailable at that layer, the only count that is incremented is UASs at that layer.

Note that this definition implies that the agent cannot determine until after a ten second interval has passed whether a given one-second interval belongs to available or unavailable time. If the agent chooses to update the various performance statistics in real time then it must be prepared to retroactively reduce the ES, SES, and SEFS counts by 10 and increase the UAS count by 10 when it determines that available time has been entered. It must also be prepared to reduce the CV count by the number of violations counted since the onset of unavailable time. The agent must be similarly prepared to retroactively decrease the UAS count by 10 and increase the ES and CV counts as necessary upon entering available time. A special case exists when the 10 second period

leading to available or unavailable time crosses a 900 second statistics window boundary, as the foregoing description implies that the CV, ES, SES, SEFS, and UAS counts the PREVIOUS interval must be adjusted. In this case successive GETs of the affected sonetPathIntervalSES and sonetPathIntervalUAS objects (and the analogous Line and VT objects also) objects will return differing values if the first GET occurs during the first few seconds of the window.

According to ANSI T1.231 unavailable time begins at the `_onset_` of 10 contiguous severely errored seconds -- that is, unavailable time starts with the `_first_` of the 10 contiguous SESs. Also, while an interface is deemed unavailable all counters for that interface are frozen except for the UAS count. It follows that an implementation which strictly complies with this standard must `_not_` increment any counters other than the UAS count -- even temporarily -- as a result of anything that happens during those 10 seconds. Since changes in the signal state lag the data to which they apply by 10 seconds, an ANSI-compliant implementation must pass the one-second statistics through a 10-second delay line prior to updating any counters. That can be done by performing the following steps at the end of each one second interval.

- i) Read near/far end CV counter and alarm status flags from the hardware.
- ii) Accumulate the CV counts for the preceding second and compare them to the ES and SES threshold for the layer in question. Update the signal state and shift the one-second CV counts and ES/SES flags into the 10-element delay line. Note that far-end one-second statistics are to be flagged as "absent" during any second in which there is an incoming defect at the layer in question or at any lower layer.
- iii) Update the current interval statistics using the signal state from the `_previous_` update cycle and the one-second CV counts and ES/SES flags shifted out of the 10-element delay line.

This approach is further described in Appendix A. An agent may choose to use this approach in lieu of retroactive adjustments to the counters.

In any case, a linkDown trap shall be sent only after the agent has determined for certain that the unavailable state has been entered, but the time on the trap will be that of the first UAS (i.e., 10 seconds earlier). A linkUp trap shall be handled similarly.

#### Unequipped

If a Path or VT connection is not provisioned (idle) the SONET equipment will signal this state by transmitting the Path or VT Signal Label as follows: - byte C2 of the STS Path Overhead equal to 0 for an unequipped Path, - byte V5 of the VT Path Overhead equal to 0 for an unequipped VT.

#### Signal Label Mismatch

A Path or VT connection is not correctly provisioned if a received Path or VT Signal Label mismatch occurs. A received Signal Label is considered mismatched if it does not equal either the locally provisioned value or the value 'equipped non-specific' (1 hex). Note that any received non-zero Signal Label is considered a locally provisioned value of 'equipped non-specific'. Only in-service, provisioned Path Terminating equipment can detect mismatched Signal labels. It is considered provisioned if it has been configured for a mapping and has been assigned signals to and from which the mapping takes place. While a Path is unequipped or has mismatched signal labels ES/SES counts continue, but these conditions do not themselves contribute to ES/SES.

#### Circuit Identifier

This is a character string specified by the circuit vendor, and is useful when communicating with the vendor during the troubleshooting process.

### 4. Object Definitions

```
SONET-MIB DEFINITIONS ::= BEGIN
```

#### IMPORTS

```
MODULE-IDENTITY, OBJECT-TYPE,  
Integer32, transmission  
FROM SNMPv2-SMI  
DisplayString, TruthValue  
FROM SNMPv2-TC  
MODULE-COMPLIANCE, OBJECT-GROUP  
FROM SNMPv2-CONF  
ifIndex  
FROM IF-MIB  
PerfCurrentCount, PerfIntervalCount  
FROM PerfHist-TC-MIB;
```

```
-- This is the MIB module for the SONET/SDH Interface objects.
```

#### sonetMIB MODULE-IDENTITY

```
LAST-UPDATED "200308110000Z"  
ORGANIZATION "IETF ATOM MIB Working Group"
```

## CONTACT-INFO

"WG charter:

<http://www.ietf.org/html.charters/atommib-charter.html>

## Mailing Lists:

General Discussion: [atommib@research.telcordia.com](mailto:atommib@research.telcordia.com)

To Subscribe: [atommib-request@research.telcordia.com](mailto:atommib-request@research.telcordia.com)

Kaj Tesink

Telcordia Technologies

Tel: (732) 758-5254

Fax: (732) 758-2269

E-mail: [kaj@research.telcordia.com](mailto:kaj@research.telcordia.com)."

## DESCRIPTION

"The MIB module to describe SONET/SDH interface objects.

Copyright (C) The Internet Society (2003). This version of this MIB module is part of RFC 3592; see the RFC itself for full legal notices."

REVISION "200308110000Z"

## DESCRIPTION

"The key changes made to this MIB module since its publication in RFC 2558 are as follows.

- (1) Corrected typographical error  
(bellcore1991(2) in sonetSESthresholdSet)
- (2) Added support for sts192cSTM64(6) and  
sts768cSTM256(7) in sonetPathCurrentWidth
- (3) Corrected description of the applicability  
of VTs for SDH for improved accuracy
- (4) Added clarification in the SES description that  
CV counts should be frozen during SESs
- (5) Corrected typographical errors:
  - Line Alarm Indication Signal description of the  
Terminology section (20.5 --> 2.5 seconds)
  - In the Terminology section  
sonetSESthresholdSet --> sonetSESthresholdSet

"

REVISION "199810190000Z"

## DESCRIPTION

"The RFC 2558 version of this MIB module.



The key changes made to this MIB module since its initial publication in RFC 1595 are as follows.

- (1) The MODULE-IDENTITY has been updated to reflect the changes to the MIB.
- (2) Where applicable, the textual conventions PerfCurrentCount and PerfIntervalCount from PerfHist-TC-MIB have been used in place of Gauge32.
- (3) An agent now has the option to delay updates to the various performance counts in lieu of performing retroactive adjustments upon entering into or exiting from unavailable time. This implementation option is described in Appendix A of this memo.
- (4) In order to make the SONET-MIB more useful for circuit provisioning, the formerly read-only objects sonetMediumType, sonetMediumLineCoding, sonetMediumLineType, and sonetMediumCircuitIdentifier have been given a MAX-ACCESS of read-write. The MIN-ACCESS remains read-only.
- (5) The DESCRIPTION clause for sonetMediumTimeElapsed has been updated to describe its behaviour if the duration of the current interval exceeds the maximum value.
- (6) The DESCRIPTION clause for sonetMediumValidIntervals has been updated to describe its behaviour when some intervals may be unavailable, and the object sonetMediumInvalidIntervals has been added to keep count of the number of missing intervals (if any).
- (7) The object sonetMediumLoopbackConfig has been added to enable or disable loopback configurations.
- (8) Because the error count thresholds for declaring severely errored seconds that are specified in ANSI T1.231-1993, ITU-T G.826-1995, and ANSI T1.231-1997 are all different from each other and from the thresholds specified in RFC 1595, an enumerated INTEGER object sonetSESthresholdSet has been added to allow an agent to specify which threshold set is in use. Text has been added to Section 3 stating that if this object is not implemented the thresholds specified in RFC 1595 should be assumed, and the table containing those thresholds has been moved to Appendix B of this memo.

- (9) A column with SYNTAX TruthValue has been added to each interval table. The purpose of the additional column is to indicate, for each interval, whether the data is valid in the sense intended by ANSI T1.231 clause 9.1.2.2 [T1.231a][T1.231b]. The objects in question are:

```
sonetSectionIntervalValidData
sonetLineIntervalValidData
sonetFarEndLineIntervalValidData
sonetPathIntervalValidData
sonetFarEndPathIntervalValidData
sonetVTIntervalValidData
sonetFarEndVTIntervalValidData
```

- (10) The ranges for sonetPathCurrentStatus and sonetVTCurrentStatus have been made consistent with the DESCRIPTION clauses.
- (11) The conformance information has been updated. Previous conformance information from RFC 1595 has been deprecated. Some typographical errors in the deprecated section have been corrected in order to prevent MIB compilation errors."

```
REVISION      "199401030000Z"
DESCRIPTION
  "The RFC 1595 version of this MIB module."
```

```
::= { transmission 39 }
```

```
-- This is the MIB module for the SONET/SDH objects
```

```
sonetObjects      OBJECT IDENTIFIER ::= { sonetMIB 1 }
```

```
sonetObjectsPath  OBJECT IDENTIFIER ::= { sonetMIB 2 }
```

```
sonetObjectsVT    OBJECT IDENTIFIER ::= { sonetMIB 3 }
```

```
-- groups in the SONET/SDH MIB module
```

```
sonetMedium       OBJECT IDENTIFIER ::= { sonetObjects 1 }
```

```
sonetSection      OBJECT IDENTIFIER ::= { sonetObjects 2 }
```

```
sonetLine         OBJECT IDENTIFIER ::= { sonetObjects 3 }
```

```
sonetFarEndLine   OBJECT IDENTIFIER ::= { sonetObjects 4 }
```

```

sonetPath          OBJECT IDENTIFIER ::= { sonetObjectsPath 1 }

sonetFarEndPath    OBJECT IDENTIFIER ::= { sonetObjectsPath 2 }

sonetVT            OBJECT IDENTIFIER ::= { sonetObjectsVT 1 }

sonetFarEndVT      OBJECT IDENTIFIER ::= { sonetObjectsVT 2 }

-- the SONET/SDH Medium group

-- SONET/SDH interfaces for some applications may be electrical
-- interfaces and not optical interfaces. This group handles
-- the configuration information for both optical SONET/SDH
-- interfaces and electrical SONET/SDH interfaces.

sonetMediumTable OBJECT-TYPE
    SYNTAX  SEQUENCE OF SonetMediumEntry
    MAX-ACCESS not-accessible
    STATUS  current
    DESCRIPTION
        "The SONET/SDH Medium table."
    ::= { sonetMedium 1 }

sonetMediumEntry OBJECT-TYPE
    SYNTAX  SonetMediumEntry
    MAX-ACCESS not-accessible
    STATUS  current
    DESCRIPTION
        "An entry in the SONET/SDH Medium table."
    INDEX   { ifIndex }
    ::= { sonetMediumTable 1 }

SonetMediumEntry ::=
    SEQUENCE {
        sonetMediumType          INTEGER,
        sonetMediumTimeElapsed   Integer32,
        sonetMediumValidIntervals Integer32,
        sonetMediumLineCoding    INTEGER,
        sonetMediumLineType      INTEGER,
        sonetMediumCircuitIdentifier DisplayString,
        sonetMediumInvalidIntervals Integer32,
        sonetMediumLoopbackConfig BITS
    }

sonetMediumType OBJECT-TYPE
    SYNTAX  INTEGER {
        sonet(1),
        sdh(2)
    }

```

```

    }
    MAX-ACCESS read-write
    STATUS current
    DESCRIPTION
        "This variable identifies whether a SONET
        or a SDH signal is used across this interface."
    ::= { sonetMediumEntry 1 }

```

sonetMediumTimeElapsed OBJECT-TYPE

```

    SYNTAX Integer32 (1..900)
    MAX-ACCESS read-only
    STATUS current
    DESCRIPTION
        "The number of seconds, including partial seconds,
        that have elapsed since the beginning of the current
        measurement period. If, for some reason, such as an
        adjustment in the system's time-of-day clock, the
        current interval exceeds the maximum value, the
        agent will return the maximum value."
    ::= { sonetMediumEntry 2 }

```

sonetMediumValidIntervals OBJECT-TYPE

```

    SYNTAX Integer32 (0..96)
    MAX-ACCESS read-only
    STATUS current
    DESCRIPTION
        "The number of previous 15-minute intervals
        for which data was collected.
        A SONET/SDH interface must be capable
        of supporting at least n intervals.
        The minimum value of n is 4.
        The default of n is 32.
        The maximum value of n is 96.
        The value will be <n> unless the measurement was
        (re-)started within the last (<n>*15) minutes, in which
        case the value will be the number of complete 15
        minute intervals for which the agent has at least
        some data. In certain cases (e.g., in the case
        where the agent is a proxy) it is possible that some
        intervals are unavailable. In this case, this
        interval is the maximum interval number for
        which data is available. "
    ::= { sonetMediumEntry 3 }

```

sonetMediumLineCoding OBJECT-TYPE

```

    SYNTAX INTEGER {
        sonetMediumOther(1),
        sonetMediumB3ZS(2),

```

```

        sonetMediumCMI(3),
        sonetMediumNRZ(4),
        sonetMediumRZ(5)
    }
MAX-ACCESS    read-write
STATUS        current
DESCRIPTION
    "This variable describes the line coding for
    this interface. The B3ZS and CMI are used for
    electrical SONET/SDH signals (STS-1 and STS-3).
    The Non-Return to Zero (NRZ) and the Return
    to Zero are used for optical SONET/SDH signals."
::= { sonetMediumEntry 4 }

sonetMediumLineType OBJECT-TYPE
    SYNTAX     INTEGER {
        sonetOther(1),
        sonetShortSingleMode(2),
        sonetLongSingleMode(3),
        sonetMultiMode(4),
        sonetCoax(5),
        sonetUTP(6)
    }
MAX-ACCESS    read-write
STATUS        current
DESCRIPTION
    "This variable describes the line type for
    this interface. The line types are
    Short and Long Range
    Single Mode fiber or Multi-Mode fiber interfaces,
    and coax and UTP for electrical interfaces. The
    value sonetOther should be used when the Line Type is
    not one of the listed values."
::= { sonetMediumEntry 5 }

sonetMediumCircuitIdentifier OBJECT-TYPE
    SYNTAX     DisplayString (SIZE (0..255))
MAX-ACCESS    read-write
STATUS        current
DESCRIPTION
    "This variable contains the transmission
    vendor's circuit identifier, for the
    purpose of facilitating troubleshooting.
    Note that the circuit identifier, if available,
    is also represented by ifPhysAddress."
::= { sonetMediumEntry 6 }

```

## sonetMediumInvalidIntervals OBJECT-TYPE

SYNTAX Integer32 (0..96)

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The number of intervals in the range from 0 to sonetMediumValidIntervals for which no data is available. This object will typically be zero except in cases where the data for some intervals are not available (e.g., in proxy situations)."

::= { sonetMediumEntry 7 }

## sonetMediumLoopbackConfig OBJECT-TYPE

SYNTAX BITS {  
     sonetNoLoop(0),  
     sonetFacilityLoop(1),  
     sonetTerminalLoop(2),  
     sonetOtherLoop(3) }

MAX-ACCESS read-write

STATUS current

DESCRIPTION

"The current loopback state of the SONET/SDH interface. The values mean:

## sonetNoLoop

Not in the loopback state. A device that is not capable of performing a loopback on this interface shall always return this value.

## sonetFacilityLoop

The received signal at this interface is looped back out through the corresponding transmitter in the return direction.

## sonetTerminalLoop

The signal that is about to be transmitted is connected to the associated incoming receiver.

## sonetOtherLoop

Loopbacks that are not defined here."

::= { sonetMediumEntry 8 }

## sonetSESthresholdSet OBJECT-TYPE

SYNTAX INTEGER {  
     other(1),  
     bellcore1991(2),

```

        ansil993(3),
        itul995(4),
        ansil997(5)
    }
MAX-ACCESS      read-write
STATUS          current
DESCRIPTION
    "An enumerated integer indicating which
    recognized set of SES thresholds that
    the agent uses for determining severely
    errored seconds and unavailable time.

    other(1)
        None of the following.

    bellcore1991(2)
        Bellcore TR-NWT-000253, 1991 [TR253], or
        ANSI T1M1.3/93-005R2, 1993 [T1M1.3].
        See also Appendix B.

    ansil993(3)
        ANSI T1.231, 1993 [T1.231a], or
        Bellcore GR-253-CORE, Issue 2, 1995 [GR253]

    itul995(4)
        ITU Recommendation G.826, 1995 [G.826]

    ansil997(5)
        ANSI T1.231, 1997 [T1.231b]

    If a manager changes the value of this
    object then the SES statistics collected
    prior to this change must be invalidated."
 ::= { sonetMedium 2 }

-- the SONET/SDH Section group

-- this group consists of 2 tables:
-- - the SONET/SDH Section Current Table
-- - the SONET/SDH Section Interval Table

-- the SONET/SDH Section Current Table

-- The SONET/SDH Section
-- current table contains various statistics
-- being collected for the current 15 minute interval.
```

```

sonetSectionCurrentTable OBJECT-TYPE
    SYNTAX  SEQUENCE OF SonetSectionCurrentEntry
    MAX-ACCESS not-accessible
    STATUS  current
    DESCRIPTION
        "The SONET/SDH Section Current table."
    ::= { sonetSection 1 }

sonetSectionCurrentEntry OBJECT-TYPE
    SYNTAX  SonetSectionCurrentEntry
    MAX-ACCESS not-accessible
    STATUS  current
    DESCRIPTION
        "An entry in the SONET/SDH Section Current table."
    INDEX   { ifIndex }
    ::= { sonetSectionCurrentTable 1 }

SonetSectionCurrentEntry ::=
    SEQUENCE {
        sonetSectionCurrentStatus      Integer32,
        sonetSectionCurrentESS         PerfCurrentCount,
        sonetSectionCurrentSESS        PerfCurrentCount,
        sonetSectionCurrentSEFSS       PerfCurrentCount,
        sonetSectionCurrentCVs         PerfCurrentCount
    }

sonetSectionCurrentStatus OBJECT-TYPE
    SYNTAX  Integer32 (1..6)
    MAX-ACCESS read-only
    STATUS  current
    DESCRIPTION
        "This variable indicates the
        status of the interface.
        The sonetSectionCurrentStatus
        is a bit map represented
        as a sum, therefore,
        it can represent multiple defects
        simultaneously.
        The sonetSectionNoDefect should be
        set if and only if
        no other flag is set.

        The various bit positions are:
            1    sonetSectionNoDefect
            2    sonetSectionLOS
            4    sonetSectionLOF"
    ::= { sonetSectionCurrentEntry 1 }

```



```
sonetSectionCurrentESS OBJECT-TYPE
    SYNTAX  PerfCurrentCount
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "The counter associated with the number of Errored
        Seconds encountered by a SONET/SDH
        Section in the current 15 minute interval."
    ::= { sonetSectionCurrentEntry 2 }

sonetSectionCurrentSESS OBJECT-TYPE
    SYNTAX  PerfCurrentCount
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "The counter associated with the number of
        Severely Errored Seconds
        encountered by a SONET/SDH Section in the current 15
        minute interval."
    ::= { sonetSectionCurrentEntry 3 }

sonetSectionCurrentSEFSS OBJECT-TYPE
    SYNTAX  PerfCurrentCount
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "The counter associated with the number of
        Severely Errored Framing Seconds
        encountered by a SONET/SDH Section in the current
        15 minute interval."
    ::= { sonetSectionCurrentEntry 4 }

sonetSectionCurrentCVs OBJECT-TYPE
    SYNTAX  PerfCurrentCount
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "The counter associated with the number of Coding
        Violations encountered by a
        SONET/SDH Section in the current 15 minute interval."
    ::= { sonetSectionCurrentEntry 5 }

-- the SONET/SDH Section Interval Table

-- The SONET/SDH Section Interval Table
-- contains various statistics
-- collected by each system over a maximum
-- of the previous 24 hours of
```

```
-- operation. The past 24 hours may be broken into 96
-- completed 15 minute intervals.
-- A system is required to store at
-- least 4 completed 15 minute interval.
-- The default value is 32 intervals.
```

```
sonetSectionIntervalTable OBJECT-TYPE
    SYNTAX SEQUENCE OF SonetSectionIntervalEntry
    MAX-ACCESS not-accessible
    STATUS current
    DESCRIPTION
        "The SONET/SDH Section Interval table."
    ::= { sonetSection 2 }
```

```
sonetSectionIntervalEntry OBJECT-TYPE
    SYNTAX SonetSectionIntervalEntry
    MAX-ACCESS not-accessible
    STATUS current
    DESCRIPTION
        "An entry in the SONET/SDH Section Interval table."
    INDEX { ifIndex,
            sonetSectionIntervalNumber }
    ::= { sonetSectionIntervalTable 1 }
```

```
SonetSectionIntervalEntry ::=
    SEQUENCE {
        sonetSectionIntervalNumber Integer32,
        sonetSectionIntervalESS PerfIntervalCount,
        sonetSectionIntervalSESS PerfIntervalCount,
        sonetSectionIntervalSEFSS PerfIntervalCount,
        sonetSectionIntervalCVs PerfIntervalCount,
        sonetSectionIntervalValidData TruthValue
    }
```

```
sonetSectionIntervalNumber OBJECT-TYPE
    SYNTAX Integer32 (1..96)
    MAX-ACCESS not-accessible
    STATUS current
    DESCRIPTION
        "A number between 1 and 96, which identifies the
        interval for which the set of statistics is available.
        The interval identified by 1 is the most recently
        completed 15 minute interval,
        and the interval identified
        by N is the interval immediately preceding the
        one identified
        by N-1."
    ::= { sonetSectionIntervalEntry 1 }
```

## sonetSectionIntervaleSSs OBJECT-TYPE

SYNTAX PerfIntervalCount

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The counter associated with the number of  
Errored Seconds encountered  
by a SONET/SDH Section in a  
particular 15-minute interval  
in the past 24 hours."

::= { sonetSectionIntervalEntry 2 }

## sonetSectionIntervalSESSs OBJECT-TYPE

SYNTAX PerfIntervalCount

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The counter associated with the number of  
Severely Errored Seconds  
encountered by a SONET/SDH Section in a  
particular 15-minute interval  
in the past 24 hours."

::= { sonetSectionIntervalEntry 3 }

## sonetSectionIntervalSEFSSs OBJECT-TYPE

SYNTAX PerfIntervalCount

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The counter associated with the number of  
Severely Errored Framing Seconds  
encountered by a SONET/SDH Section in a  
particular 15-minute interval  
in the past 24 hours."

::= { sonetSectionIntervalEntry 4 }

## sonetSectionIntervalCVs OBJECT-TYPE

SYNTAX PerfIntervalCount

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The counter associated with the number of Coding  
Violations encountered by a  
SONET/SDH Section in a particular 15-minute interval  
in the past 24 hours."

::= { sonetSectionIntervalEntry 5 }

```

sonetSectionIntervalValidData OBJECT-TYPE
    SYNTAX  TruthValue
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "This variable indicates if the data for this
        interval is valid."
    ::= { sonetSectionIntervalEntry 6 }

-- the SONET/SDH Line group

-- this group consists of 2 tables:
-- - the SONET/SDH Line Current Table
-- - the SONET/SDH Line Interval Table

-- the SONET/SDH Line Current Table

-- The SONET/SDH Line
-- current table contains various statistics
-- being collected for the current 15 minute interval.

sonetLineCurrentTable OBJECT-TYPE
    SYNTAX  SEQUENCE OF SonetLineCurrentEntry
    MAX-ACCESS  not-accessible
    STATUS  current
    DESCRIPTION
        "The SONET/SDH Line Current table."
    ::= { sonetLine 1 }

sonetLineCurrentEntry OBJECT-TYPE
    SYNTAX  SonetLineCurrentEntry
    MAX-ACCESS  not-accessible
    STATUS  current
    DESCRIPTION
        "An entry in the SONET/SDH Line Current table."
    INDEX   { ifIndex }
    ::= { sonetLineCurrentTable 1 }

SonetLineCurrentEntry ::=
    SEQUENCE {
        sonetLineCurrentStatus      Integer32,
        sonetLineCurrentESS         PerfCurrentCount,
        sonetLineCurrentSESS        PerfCurrentCount,
        sonetLineCurrentCVs         PerfCurrentCount,
        sonetLineCurrentUASS        PerfCurrentCount
    }

```

## sonetLineCurrentStatus OBJECT-TYPE

SYNTAX Integer32 (1..6)

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This variable indicates the status of the interface. The sonetLineCurrentStatus is a bit map represented as a sum, therefore, it can represent multiple defects simultaneously. The sonetLineNoDefect should be set if and only if no other flag is set.

The various bit positions are:

- 1 sonetLineNoDefect
- 2 sonetLineAIS
- 4 sonetLineRDI"

::= { sonetLineCurrentEntry 1 }

## sonetLineCurrentESSs OBJECT-TYPE

SYNTAX PerfCurrentCount

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The counter associated with the number of Errored Seconds encountered by a SONET/SDH Line in the current 15 minute interval."

::= { sonetLineCurrentEntry 2 }

## sonetLineCurrentSESSs OBJECT-TYPE

SYNTAX PerfCurrentCount

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The counter associated with the number of Severely Errored Seconds encountered by a SONET/SDH Line in the current 15 minute interval."

::= { sonetLineCurrentEntry 3 }

## sonetLineCurrentCVs OBJECT-TYPE

SYNTAX PerfCurrentCount

MAX-ACCESS read-only

STATUS current

## DESCRIPTION

"The counter associated with the number of Coding Violations encountered by a SONET/SDH Line in the current 15 minute interval."  
 ::= { sonetLineCurrentEntry 4 }

## sonetLineCurrentUASS OBJECT-TYPE

SYNTAX PerfCurrentCount

MAX-ACCESS read-only

STATUS current

## DESCRIPTION

"The counter associated with the number of Unavailable Seconds encountered by a SONET/SDH Line in the current 15 minute interval."  
 ::= { sonetLineCurrentEntry 5 }

-- the SONET/SDH Line Interval Table

-- The SONET/SDH Line Interval Table  
 -- contains various statistics  
 -- collected by each system over a maximum  
 -- of the previous 24 hours of  
 -- operation. The past 24 hours may be broken into 96  
 -- completed 15 minute intervals.  
 -- A system is required to store at  
 -- least 4 completed 15 minute interval.  
 -- The default value is 32 intervals.

## sonetLineIntervalTable OBJECT-TYPE

SYNTAX SEQUENCE OF SonetLineIntervalEntry

MAX-ACCESS not-accessible

STATUS current

## DESCRIPTION

"The SONET/SDH Line Interval table."  
 ::= { sonetLine 2 }

## sonetLineIntervalEntry OBJECT-TYPE

SYNTAX SonetLineIntervalEntry

MAX-ACCESS not-accessible

STATUS current

## DESCRIPTION

"An entry in the SONET/SDH Line Interval table."

INDEX { ifIndex,  
           sonetLineIntervalNumber }  
 ::= { sonetLineIntervalTable 1 }

```

SonetLineIntervalEntry ::=
    SEQUENCE {
        sonetLineIntervalNumber      Integer32,
        sonetLineIntervalESSs        PerfIntervalCount,
        sonetLineIntervalSESSs       PerfIntervalCount,
        sonetLineIntervalCVs         PerfIntervalCount,
        sonetLineIntervalUASSs       PerfIntervalCount,
        sonetLineIntervalValidData   TruthValue
    }

sonetLineIntervalNumber OBJECT-TYPE
    SYNTAX      Integer32 (1..96)
    MAX-ACCESS  not-accessible
    STATUS      current
    DESCRIPTION
        "A number between 1 and 96, which identifies the
        interval for which the set of statistics is available.
        The interval identified by 1 is the most recently
        completed 15 minute interval,
        and the interval identified
        by N is the interval immediately preceding the
        one identified
        by N-1."
    ::= { sonetLineIntervalEntry 1 }

sonetLineIntervalESSs OBJECT-TYPE
    SYNTAX      PerfIntervalCount
    MAX-ACCESS  read-only
    STATUS      current
    DESCRIPTION
        "The counter associated with the number of
        Errored Seconds encountered
        by a SONET/SDH Line in a
        particular 15-minute interval
        in the past 24 hours."
    ::= { sonetLineIntervalEntry 2 }

sonetLineIntervalSESSs OBJECT-TYPE
    SYNTAX      PerfIntervalCount
    MAX-ACCESS  read-only
    STATUS      current
    DESCRIPTION
        "The counter associated with the number of
        Severely Errored Seconds
        encountered by a SONET/SDH Line in a
        particular 15-minute interval
        in the past 24 hours."
    ::= { sonetLineIntervalEntry 3 }

```

```
sonetLineIntervalCVs OBJECT-TYPE
    SYNTAX  PerfIntervalCount
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "The counter associated with the number of Coding
        Violations encountered by a
        SONET/SDH Line in a
        particular 15-minute interval
        in the past 24 hours."
    ::= { sonetLineIntervalEntry 4 }

sonetLineIntervalUASS OBJECT-TYPE
    SYNTAX  PerfIntervalCount
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "The counter associated with the
        number of Unavailable Seconds
        encountered by a SONET/SDH Line in
        a particular 15-minute interval
        in the past 24 hours."
    ::= { sonetLineIntervalEntry 5 }

sonetLineIntervalValidData OBJECT-TYPE
    SYNTAX  TruthValue
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "This variable indicates if the data for this
        interval is valid."
    ::= { sonetLineIntervalEntry 6 }

-- The SONET/SDH Far End Line group.
-- This group may only be implemented by SONET/SDH (LTES)
-- systems that provide for a far end block error (FEBE)
-- information at the SONET/SDH Line Layer.

-- This group consists of two tables:
--     SONET/SDH Far End Line Current Table
--     SONET/SDH Far End Line Interval Table

-- The SONET/SDH Far End Line Current Table

-- The SONET/SDH Far End Line Current table contains
-- various statistics being
-- collected for the current 15 minute interval.
-- The statistics are collected from the far end
```



```
-- block error code (FEBE)
-- within the third Z2 byte of the Line Overhead
-- in Broadband ISDN applications.
-- The definitions are the same as described for
-- the near-end information.
```

```
sonetFarEndLineCurrentTable OBJECT-TYPE
    SYNTAX SEQUENCE OF SonetFarEndLineCurrentEntry
    MAX-ACCESS not-accessible
    STATUS current
    DESCRIPTION
        "The SONET/SDH Far End Line Current table."
    ::= { sonetFarEndLine 1 }
```

```
sonetFarEndLineCurrentEntry OBJECT-TYPE
    SYNTAX SonetFarEndLineCurrentEntry
    MAX-ACCESS not-accessible
    STATUS current
    DESCRIPTION
        "An entry in the SONET/SDH Far End Line Current table."
    INDEX { ifIndex }
    ::= { sonetFarEndLineCurrentTable 1 }
```

```
SonetFarEndLineCurrentEntry ::=
    SEQUENCE {
        sonetFarEndLineCurrentESS          PerfCurrentCount,
        sonetFarEndLineCurrentSESS         PerfCurrentCount,
        sonetFarEndLineCurrentCVs          PerfCurrentCount,
        sonetFarEndLineCurrentUASs         PerfCurrentCount
    }
```

```
sonetFarEndLineCurrentESS OBJECT-TYPE
    SYNTAX PerfCurrentCount
    MAX-ACCESS read-only
    STATUS current
    DESCRIPTION
        "The counter associated with the number of Far
        End Errored Seconds encountered by a SONET/SDH
        interface in the current 15 minute interval."
    ::= { sonetFarEndLineCurrentEntry 1 }
```

```
sonetFarEndLineCurrentSESS OBJECT-TYPE
    SYNTAX PerfCurrentCount
    MAX-ACCESS read-only
    STATUS current
    DESCRIPTION
        "The counter associated with the number of
        Far End Severely Errored Seconds
```

```

        encountered by a SONET/SDH Medium/Section/Line
        interface in the current 15 minute
        interval."
 ::= { sonetFarEndLineCurrentEntry 2 }

sonetFarEndLineCurrentCVs OBJECT-TYPE
    SYNTAX  PerfCurrentCount
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "The counter associated with the number of
        Far End Coding Violations reported via
        the far end block error count
        encountered by a
        SONET/SDH Medium/Section/Line
        interface in the current 15 minute interval."
 ::= { sonetFarEndLineCurrentEntry 3 }

sonetFarEndLineCurrentUASSs OBJECT-TYPE
    SYNTAX  PerfCurrentCount
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "The counter associated with the number of
        Far End Unavailable Seconds
        encountered by a
        SONET/SDH Medium/Section/Line
        interface in the current 15 minute interval."
 ::= { sonetFarEndLineCurrentEntry 4 }

-- The SONET/SDH Far End Line Interval Table

-- The SONET/SDH Far End Line Interval Table
-- contains various statistics
-- collected by each system over a maximum
-- of the previous 24 hours of
-- operation.  The past 24 hours may be broken into 96
-- completed 15 minute intervals.
-- A system is required to store at
-- least 4 completed 15 minute interval.
-- The default value is 32 intervals.

sonetFarEndLineIntervalTable OBJECT-TYPE
    SYNTAX  SEQUENCE OF SonetFarEndLineIntervalEntry
    MAX-ACCESS  not-accessible
    STATUS  current
    DESCRIPTION
        "The SONET/SDH Far End Line Interval table."

```

```
::= { sonetFarEndLine 2 }
```

sonetFarEndLineIntervalEntry OBJECT-TYPE

SYNTAX SonetFarEndLineIntervalEntry

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"An entry in the SONET/SDH Far  
End Line Interval table."

INDEX { ifIndex,  
sonetFarEndLineIntervalNumber }

```
::= { sonetFarEndLineIntervalTable 1 }
```

SonetFarEndLineIntervalEntry ::=

SEQUENCE {

sonetFarEndLineIntervalNumber Integer32,

sonetFarEndLineIntervaleSS PerfIntervalCount,

sonetFarEndLineIntervalSESS PerfIntervalCount,

sonetFarEndLineIntervalCVs PerfIntervalCount,

sonetFarEndLineIntervalUASS PerfIntervalCount,

sonetFarEndLineIntervalValidData TruthValue

}

sonetFarEndLineIntervalNumber OBJECT-TYPE

SYNTAX Integer32 (1..96)

MAX-ACCESS not-accessible

STATUS current

DESCRIPTION

"A number between 1 and 96, which identifies the  
interval for which the set of statistics is available.  
The interval identified by 1 is the most recently  
completed 15 minute interval,  
and the interval identified  
by N is the interval immediately preceding the  
one identified  
by N-1."

```
::= { sonetFarEndLineIntervalEntry 1 }
```

sonetFarEndLineIntervaleSS OBJECT-TYPE

SYNTAX PerfIntervalCount

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The counter associated with the number of  
Far End Errored Seconds encountered  
by a SONET/SDH Line  
interface in a particular 15-minute interval  
in the past 24 hours."

```
::= { sonetFarEndLineIntervalEntry 2 }

sonetFarEndLineIntervalSESSs OBJECT-TYPE
    SYNTAX  PerfIntervalCount
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "The counter associated with the number of
        Far End Severely Errored Seconds
        encountered by a SONET/SDH Line
        interface in a particular 15-minute interval
        in the past 24 hours."
    ::= { sonetFarEndLineIntervalEntry 3 }

sonetFarEndLineIntervalCVs OBJECT-TYPE
    SYNTAX  PerfIntervalCount
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "The counter associated with the number of
        Far End Coding Violations reported via
        the far end block error count
        encountered by a
        SONET/SDH Line
        interface in a particular 15-minute interval
        in the past 24 hours."
    ::= { sonetFarEndLineIntervalEntry 4 }

sonetFarEndLineIntervalUASSs OBJECT-TYPE
    SYNTAX  PerfIntervalCount
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "The counter associated with the number of
        Far End Unavailable Seconds
        encountered by a
        SONET/SDH Line
        interface in a particular 15-minute interval
        in the past 24 hours."
    ::= { sonetFarEndLineIntervalEntry 5 }

sonetFarEndLineIntervalValidData OBJECT-TYPE
    SYNTAX  TruthValue
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "This variable indicates if the data for this
        interval is valid."
```

```

    ::= { sonetFarEndLineIntervalEntry 6 }

-- the SONET/SDH Path group

-- this group consists of 2 tables:
-- - the SONET/SDH Path Current Table
-- - the SONET/SDH Path Interval Table

-- the SONET/SDH Path Current Table

-- The SONET/SDH Path
-- current table contains various statistics
-- being collected for the current 15 minute interval.

sonetPathCurrentTable OBJECT-TYPE
    SYNTAX SEQUENCE OF SonetPathCurrentEntry
    MAX-ACCESS not-accessible
    STATUS current
    DESCRIPTION
        "The SONET/SDH Path Current table."
    ::= { sonetPath 1 }

sonetPathCurrentEntry OBJECT-TYPE
    SYNTAX SonetPathCurrentEntry
    MAX-ACCESS not-accessible
    STATUS current
    DESCRIPTION
        "An entry in the SONET/SDH Path Current table."
    INDEX { ifIndex }
    ::= { sonetPathCurrentTable 1 }

SonetPathCurrentEntry ::=
    SEQUENCE {
        sonetPathCurrentWidth      INTEGER,
        sonetPathCurrentStatus     Integer32,
        sonetPathCurrentESS        PerfCurrentCount,
        sonetPathCurrentSESS       PerfCurrentCount,
        sonetPathCurrentCVs        PerfCurrentCount,
        sonetPathCurrentUASS        PerfCurrentCount
    }

sonetPathCurrentWidth OBJECT-TYPE
    SYNTAX INTEGER {
        sts1(1),
        sts3cSTM1(2),
        sts12cSTM4(3),
        sts24c(4),
        sts48cSTM16(5),
    }

```

```

        sts192cSTM64(6),
        sts768cSTM256(7)
    }
    MAX-ACCESS    read-write
    STATUS        current
    DESCRIPTION
        "A value that indicates the type of the SONET/SDH
        Path. For SONET, the assigned types are
        the STS-Nc SPEs, where N = 1, 3, 12, 24, 48, 192 and 768.
        STS-1 is equal to 51.84 Mbps. For SDH, the assigned
        types are the STM-Nc VCs, where N = 1, 4, 16, 64 and 256."
 ::= { sonetPathCurrentEntry 1 }

```

```

sonetPathCurrentStatus OBJECT-TYPE
    SYNTAX      Integer32 (1..62)
    MAX-ACCESS  read-only
    STATUS      current
    DESCRIPTION
        "This variable indicates the
        status of the interface.
        The sonetPathCurrentStatus
        is a bit map represented
        as a sum, therefore,
        it can represent multiple defects
        simultaneously.
        The sonetPathNoDefect should be
        set if and only if
        no other flag is set.

        The various bit positions are:
        1    sonetPathNoDefect
        2    sonetPathSTSLOP
        4    sonetPathSTSAIS
        8    sonetPathSTSRDI
        16   sonetPathUnequipped
        32   sonetPathSignalLabelMismatch"
 ::= { sonetPathCurrentEntry 2 }

```

```

sonetPathCurrentESs OBJECT-TYPE
    SYNTAX      PerfCurrentCount
    MAX-ACCESS  read-only
    STATUS      current
    DESCRIPTION
        "The counter associated with the number of Errored
        Seconds encountered by a SONET/SDH
        Path in the current 15 minute interval."
 ::= { sonetPathCurrentEntry 3 }

```

```
sonetPathCurrentSESSs OBJECT-TYPE
    SYNTAX  PerfCurrentCount
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "The counter associated with the number of
        Severely Errored Seconds
        encountered by a SONET/SDH Path in the current 15
        minute
        interval."
    ::= { sonetPathCurrentEntry 4 }

sonetPathCurrentCVs OBJECT-TYPE
    SYNTAX  PerfCurrentCount
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "The counter associated with the number of Coding
        Violations encountered by a
        SONET/SDH Path in the current 15 minute interval."
    ::= { sonetPathCurrentEntry 5 }

sonetPathCurrentUASSs OBJECT-TYPE
    SYNTAX  PerfCurrentCount
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "The counter associated with the number of
        Unavailable Seconds
        encountered by a Path in the current
        15 minute interval."
    ::= { sonetPathCurrentEntry 6 }

-- the SONET/SDH Path Interval Table

-- The SONET/SDH Path Interval Table
-- contains various statistics
-- collected by each system over a maximum
-- of the previous 24 hours of
-- operation.  The past 24 hours may be broken into 96
-- completed 15 minute intervals.
-- A system is required to store at
-- least 4 completed 15 minute interval.
-- The default value is 32 intervals.
```

```

sonetPathIntervalTable OBJECT-TYPE
    SYNTAX  SEQUENCE OF SonetPathIntervalEntry
    MAX-ACCESS not-accessible
    STATUS current
    DESCRIPTION
        "The SONET/SDH Path Interval table."
    ::= { sonetPath 2 }

sonetPathIntervalEntry OBJECT-TYPE
    SYNTAX  SonetPathIntervalEntry
    MAX-ACCESS not-accessible
    STATUS current
    DESCRIPTION
        "An entry in the SONET/SDH Path Interval table."
    INDEX   { ifIndex,
              sonetPathIntervalNumber }
    ::= { sonetPathIntervalTable 1 }

SonetPathIntervalEntry ::=
    SEQUENCE {
        sonetPathIntervalNumber      Integer32,
        sonetPathIntervaleSSs         PerfIntervalCount,
        sonetPathIntervaleSESSs       PerfIntervalCount,
        sonetPathIntervalCVs          PerfIntervalCount,
        sonetPathIntervalUASSs        PerfIntervalCount,
        sonetPathIntervalValidData    TruthValue
    }

sonetPathIntervalNumber OBJECT-TYPE
    SYNTAX  Integer32 (1..96)
    MAX-ACCESS not-accessible
    STATUS current
    DESCRIPTION
        "A number between 1 and 96, which identifies the
        interval for which the set of statistics is available.
        The interval identified by 1 is the most recently
        completed 15 minute interval,
        and the interval identified
        by N is the interval immediately preceding the
        one identified
        by N-1."
    ::= { sonetPathIntervalEntry 1 }

sonetPathIntervaleSSs OBJECT-TYPE
    SYNTAX  PerfIntervalCount
    MAX-ACCESS read-only
    STATUS current
    DESCRIPTION

```



```
    "The counter associated with the number of
    Errored Seconds encountered
    by a SONET/SDH Path in a
    particular 15-minute interval
    in the past 24 hours."
 ::= { sonetPathIntervalEntry 2 }

sonetPathIntervalSESS OBJECT-TYPE
    SYNTAX  PerfIntervalCount
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "The counter associated with the number of
        Severely Errored Seconds
        encountered by a SONET/SDH Path in
        a particular 15-minute interval
        in the past 24 hours."
 ::= { sonetPathIntervalEntry 3 }

sonetPathIntervalCVs OBJECT-TYPE
    SYNTAX  PerfIntervalCount
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "The counter associated with the number of Coding
        Violations encountered by a
        SONET/SDH Path in a particular 15-minute interval
        in the past 24 hours."
 ::= { sonetPathIntervalEntry 4 }

sonetPathIntervalUASS OBJECT-TYPE
    SYNTAX  PerfIntervalCount
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "The counter associated with the number of
        Unavailable Seconds
        encountered by a Path in a
        particular 15-minute interval
        in the past 24 hours."
 ::= { sonetPathIntervalEntry 5 }

sonetPathIntervalValidData OBJECT-TYPE
    SYNTAX  TruthValue
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "This variable indicates if the data for this
```

```

        interval is valid."
    ::= { sonetPathIntervalEntry 6 }

-- The SONET/SDH Far End Path group

-- This group consists of two tables:
--   - SONET/SDH Far End Path Current Table
--   - SONET/SDH Far End Path Interval Table

-- The SONET/SDH Far End Path Current Table

-- The SONET/SDH Far End Path Current table
-- contains various statistics
-- being collected for the current 15 minute interval.
-- The statistics are collected from
-- the far end block error code
-- (FEBE) within the G1 byte of the Path Overhead.
-- The definitions are the same as described for
-- the near-end information.

sonetFarEndPathCurrentTable OBJECT-TYPE
    SYNTAX SEQUENCE OF SonetFarEndPathCurrentEntry
    MAX-ACCESS not-accessible
    STATUS current
    DESCRIPTION
        "The SONET/SDH Far End Path Current table."
    ::= { sonetFarEndPath 1 }

sonetFarEndPathCurrentEntry OBJECT-TYPE
    SYNTAX SonetFarEndPathCurrentEntry
    MAX-ACCESS not-accessible
    STATUS current
    DESCRIPTION
        "An entry in the SONET/SDH Far End Path Current table."
    INDEX { ifIndex }
    ::= { sonetFarEndPathCurrentTable 1 }

SonetFarEndPathCurrentEntry ::=
    SEQUENCE {
        sonetFarEndPathCurrentESS          PerfCurrentCount,
        sonetFarEndPathCurrentSESS         PerfCurrentCount,
        sonetFarEndPathCurrentCVs          PerfCurrentCount,
        sonetFarEndPathCurrentUASS         PerfCurrentCount
    }

```

```
sonetFarEndPathCurrentESS OBJECT-TYPE
    SYNTAX  PerfCurrentCount
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "The counter associated with the number of Far
        End Errored Seconds encountered by a SONET/SDH
        interface in the current 15 minute interval."
    ::= { sonetFarEndPathCurrentEntry 1 }

sonetFarEndPathCurrentSESS OBJECT-TYPE
    SYNTAX  PerfCurrentCount
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "The counter associated with the number of
        Far End Severely Errored Seconds
        encountered by a SONET/SDH Path
        interface in the current 15 minute
        interval."
    ::= { sonetFarEndPathCurrentEntry 2 }

sonetFarEndPathCurrentCVs OBJECT-TYPE
    SYNTAX  PerfCurrentCount
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "The counter associated with the number of
        Far End Coding Violations reported via
        the far end block error count
        encountered by a
        SONET/SDH Path interface in
        the current 15 minute interval."
    ::= { sonetFarEndPathCurrentEntry 3 }

sonetFarEndPathCurrentUASS OBJECT-TYPE
    SYNTAX  PerfCurrentCount
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "The counter associated with the number of
        Far End Unavailable Seconds
        encountered by a
        SONET/SDH Path interface in
        the current 15 minute interval."
    ::= { sonetFarEndPathCurrentEntry 4 }
```

```
-- The SONET/SDH Far End Path Interval Table

-- The SONET/SDH Far End Path Interval Table
-- contains various statistics
-- collected by each system over a maximum
-- of the previous 24 hours of
-- operation. The past 24 hours may be broken into 96
-- completed 15 minute intervals.
-- A system is required to store at
-- least 4 completed 15 minute interval.
-- The default value is 32 intervals.
```

```
sonetFarEndPathIntervalTable OBJECT-TYPE
    SYNTAX SEQUENCE OF SonetFarEndPathIntervalEntry
    MAX-ACCESS not-accessible
    STATUS current
    DESCRIPTION
        "The SONET/SDH Far End Path Interval table."
    ::= { sonetFarEndPath 2 }
```

```
sonetFarEndPathIntervalEntry OBJECT-TYPE
    SYNTAX SonetFarEndPathIntervalEntry
    MAX-ACCESS not-accessible
    STATUS current
    DESCRIPTION
        "An entry in the SONET/SDH Far
        End Path Interval table."
    INDEX { ifIndex,
            sonetFarEndPathIntervalNumber }
    ::= { sonetFarEndPathIntervalTable 1 }
```

```
SonetFarEndPathIntervalEntry ::=
    SEQUENCE {
        sonetFarEndPathIntervalNumber      Integer32,
        sonetFarEndPathIntervalEss         PerfIntervalCount,
        sonetFarEndPathIntervalSESS        PerfIntervalCount,
        sonetFarEndPathIntervalCVs         PerfIntervalCount,
        sonetFarEndPathIntervalUASS        PerfIntervalCount,
        sonetFarEndPathIntervalValidData   TruthValue
    }
```

```
sonetFarEndPathIntervalNumber OBJECT-TYPE
    SYNTAX Integer32 (1..96)
    MAX-ACCESS not-accessible
    STATUS current
    DESCRIPTION
        "A number between 1 and 96, which identifies the
        interval for which the set of statistics is available."
```

The interval identified by 1 is the most recently completed 15 minute interval,  
and the interval identified  
by N is the interval immediately preceding the  
one identified  
by N-1."

```
::= { sonetFarEndPathIntervalEntry 1 }
```

sonetFarEndPathIntervaleSSs OBJECT-TYPE  
SYNTAX PerfIntervalCount  
MAX-ACCESS read-only  
STATUS current  
DESCRIPTION  
    "The counter associated with the number of  
    Far End Errored Seconds encountered  
    by a SONET/SDH Path interface in a  
    particular 15-minute interval  
    in the past 24 hours."  
::= { sonetFarEndPathIntervalEntry 2 }

sonetFarEndPathIntervalSESSs OBJECT-TYPE  
SYNTAX PerfIntervalCount  
MAX-ACCESS read-only  
STATUS current  
DESCRIPTION  
    "The counter associated with the number of  
    Far End Severely Errored Seconds  
    encountered by a SONET/SDH Path interface  
    in a particular 15-minute interval  
    in the past 24 hours."  
::= { sonetFarEndPathIntervalEntry 3 }

sonetFarEndPathIntervalCVs OBJECT-TYPE  
SYNTAX PerfIntervalCount  
MAX-ACCESS read-only  
STATUS current  
DESCRIPTION  
    "The counter associated with the number of  
    Far End Coding Violations reported via  
    the far end block error count  
    encountered by a  
    SONET/SDH Path interface  
    in a particular 15-minute interval  
    in the past 24 hours."  
::= { sonetFarEndPathIntervalEntry 4 }

```
sonetFarEndPathIntervalUASS OBJECT-TYPE
    SYNTAX  PerfIntervalCount
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "The counter associated with the number of
        Far End Unavailable Seconds
        encountered by a
        SONET/SDH Path interface in
        a particular 15-minute interval
        in the past 24 hours."
    ::= { sonetFarEndPathIntervalEntry 5 }

sonetFarEndPathIntervalValidData OBJECT-TYPE
    SYNTAX  TruthValue
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "This variable indicates if the data for this
        interval is valid."
    ::= { sonetFarEndPathIntervalEntry 6 }

-- the SONET/SDH Virtual Tributary group

-- this group consists of 2 tables:
-- - the SONET/SDH VT Current Table
-- - the SONET/SDH VT Interval Table

-- Corresponding SDH signals for SONET VTs are
-- as follows:

-- A VT1.5 = TU11
-- A VT2 = TU12
-- A VT3 = none
-- none = TU3
-- A VT6 = TU2

-- the SONET/SDH VT Current Table

-- The SONET/SDH VT current table
-- contains various statistics
-- being collected for the
-- current 15 minute interval.
```

```

sonetVTCurrentTable OBJECT-TYPE
    SYNTAX  SEQUENCE OF SonetVTCurrentEntry
    MAX-ACCESS  not-accessible
    STATUS  current
    DESCRIPTION
        "The SONET/SDH VT Current table."
 ::= { sonetVT 1 }

sonetVTCurrentEntry OBJECT-TYPE
    SYNTAX  SonetVTCurrentEntry
    MAX-ACCESS  not-accessible
    STATUS  current
    DESCRIPTION
        "An entry in the SONET/SDH VT Current table."
    INDEX   { ifIndex }
 ::= { sonetVTCurrentTable 1 }

SonetVTCurrentEntry ::=
    SEQUENCE {
        sonetVTCurrentWidth      INTEGER,
        sonetVTCurrentStatus     Integer32,
        sonetVTCurrentESS        PerfCurrentCount,
        sonetVTCurrentSESS       PerfCurrentCount,
        sonetVTCurrentCVs        PerfCurrentCount,
        sonetVTCurrentUASS       PerfCurrentCount
    }

sonetVTCurrentWidth OBJECT-TYPE
    SYNTAX  INTEGER {
        vtWidth15VC11(1),
        vtWidth2VC12(2),
        vtWidth3(3),
        vtWidth6VC2(4),
        vtWidth6c(5)
    }
    MAX-ACCESS  read-write
    STATUS  current
    DESCRIPTION
        "A value that indicates the type of the SONET
         VT and SDH VC.  Assigned widths are
         VT1.5/VC11, VT2/VC12, VT3, VT6/VC2, and VT6c."
 ::= { sonetVTCurrentEntry 1 }

```

```
sonetVTCurrentStatus OBJECT-TYPE
    SYNTAX  Integer32 (1..126)
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "This variable indicates the
        status of the interface.
        The sonetVTCurrentStatus
        is a bit map represented
        as a sum, therefore,
        it can represent multiple defects
        and failures
        simultaneously.
        The sonetVTNoDefect should be
        set if and only if
        no other flag is set.

        The various bit positions are:
            1   sonetVTNoDefect
            2   sonetVTLOP
            4   sonetVTPathAIS
            8   sonetVTPathRDI
            16  sonetVTPathRFI
            32  sonetVTUnequipped
            64  sonetVTSignalLabelMismatch"
 ::= { sonetVTCurrentEntry 2 }

sonetVTCurrentESSs OBJECT-TYPE
    SYNTAX  PerfCurrentCount
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "The counter associated with the number of Errored
        Seconds encountered by a SONET/SDH
        VT in the current 15 minute interval."
 ::= { sonetVTCurrentEntry 3 }

sonetVTCurrentSESSs OBJECT-TYPE
    SYNTAX  PerfCurrentCount
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "The counter associated with the number of
        Severely Errored Seconds
        encountered by a SONET/SDH VT in the current 15 minute
        interval."
 ::= { sonetVTCurrentEntry 4 }
```



```
sonetVTCurrentCVs OBJECT-TYPE
    SYNTAX  PerfCurrentCount
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "The counter associated with the number of Coding
        Violations encountered by a
        SONET/SDH VT in the current 15 minute interval."
    ::= { sonetVTCurrentEntry 5 }
```

```
sonetVTCurrentUASs OBJECT-TYPE
    SYNTAX  PerfCurrentCount
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "The counter associated with the number of
        Unavailable Seconds
        encountered by a VT in the current
        15 minute interval."
    ::= { sonetVTCurrentEntry 6 }
```

-- the SONET/SDH VT Interval Table

-- The SONET/SDH VT Interval Table  
-- contains various statistics  
-- collected by each system over a maximum  
-- of the previous 24 hours of  
-- operation. The past 24 hours may be broken into 96  
-- completed 15 minute intervals.  
-- A system is required to store at  
-- least 4 completed 15 minute interval.  
-- The default value is 32 intervals.

```
sonetVTIntervalTable OBJECT-TYPE
    SYNTAX  SEQUENCE OF SonetVTIntervalEntry
    MAX-ACCESS  not-accessible
    STATUS  current
    DESCRIPTION
        "The SONET/SDH VT Interval table."
    ::= { sonetVT 2 }
```

```
sonetVTIntervalEntry OBJECT-TYPE
    SYNTAX  SonetVTIntervalEntry
    MAX-ACCESS  not-accessible
    STATUS  current
    DESCRIPTION
        "An entry in the SONET/SDH VT Interval table."
    INDEX   { ifIndex,
```

```

        sonetVTIntervalNumber }
 ::= { sonetVTIntervalTable 1 }

```

```

SonetVTIntervalEntry ::=
    SEQUENCE {
        sonetVTIntervalNumber      Integer32,
        sonetVTIntervaleSSs        PerfIntervalCount,
        sonetVTIntervalSESSs       PerfIntervalCount,
        sonetVTIntervalCVs         PerfIntervalCount,
        sonetVTIntervalUASSs       PerfIntervalCount,
        sonetVTIntervalValidData   TruthValue
    }

```

```

sonetVTIntervalNumber OBJECT-TYPE
    SYNTAX      Integer32 (1..96)
    MAX-ACCESS  not-accessible
    STATUS      current
    DESCRIPTION
        "A number between 1 and 96, which identifies the
        interval for which the set of statistics is available.
        The interval identified by 1 is the most recently
        completed 15 minute interval,
        and the interval identified
        by N is the interval immediately preceding the
        one identified
        by N-1."
 ::= { sonetVTIntervalEntry 1 }

```

```

sonetVTIntervaleSSs OBJECT-TYPE
    SYNTAX      PerfIntervalCount
    MAX-ACCESS  read-only
    STATUS      current
    DESCRIPTION
        "The counter associated with the number of
        Errored Seconds encountered
        by a SONET/SDH VT in a particular 15-minute interval
        in the past 24 hours."
 ::= { sonetVTIntervalEntry 2 }

```

```

sonetVTIntervalSESSs OBJECT-TYPE
    SYNTAX      PerfIntervalCount
    MAX-ACCESS  read-only
    STATUS      current
    DESCRIPTION
        "The counter associated with the number of
        Severely Errored Seconds
        encountered by a SONET/SDH VT
        in a particular 15-minute interval

```

```
        in the past 24 hours."
 ::= { sonetVTIntervalEntry 3 }

sonetVTIntervalCVs OBJECT-TYPE
    SYNTAX  PerfIntervalCount
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "The counter associated with the number of Coding
        Violations encountered by a
        SONET/SDH VT in a particular 15-minute interval
        in the past 24 hours."
 ::= { sonetVTIntervalEntry 4 }

sonetVTIntervalUASs OBJECT-TYPE
    SYNTAX  PerfIntervalCount
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "The counter associated with the number of
        Unavailable Seconds
        encountered by a VT in a particular 15-minute interval
        in the past 24 hours."
 ::= { sonetVTIntervalEntry 5 }

sonetVTIntervalValidData OBJECT-TYPE
    SYNTAX  TruthValue
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "This variable indicates if the data for this
        interval is valid."
 ::= { sonetVTIntervalEntry 6 }

-- The SONET/SDH Far End VT group

-- This group consists of two tables:
--     SONET/SDH Far End VT Current Table
--     SONET/SDH Far End VT Interval Table

-- The SONET/SDH Far End VT Current

-- The SONET/SDH Far End VT Current table
-- contains various statistics
-- being collected for the current 15 minute interval.
-- The statistics are collected from
-- the far end block error code
-- (FEBE) within the G1 byte of the VT Overhead.
```

```
-- The definitions are the same as described for
-- the near-end information.
```

```
sonetFarEndVTCurrentTable OBJECT-TYPE
```

```
    SYNTAX SEQUENCE OF SonetFarEndVTCurrentEntry
```

```
    MAX-ACCESS not-accessible
```

```
    STATUS current
```

```
    DESCRIPTION
```

```
        "The SONET/SDH Far End VT Current table."
```

```
    ::= { sonetFarEndVT 1 }
```

```
sonetFarEndVTCurrentEntry OBJECT-TYPE
```

```
    SYNTAX SonetFarEndVTCurrentEntry
```

```
    MAX-ACCESS not-accessible
```

```
    STATUS current
```

```
    DESCRIPTION
```

```
        "An entry in the SONET/SDH Far End VT Current table."
```

```
    INDEX { ifIndex }
```

```
    ::= { sonetFarEndVTCurrentTable 1 }
```

```
SonetFarEndVTCurrentEntry ::=
```

```
    SEQUENCE {
```

```
        sonetFarEndVTCurrentESS          PerfCurrentCount,
```

```
        sonetFarEndVTCurrentSESS         PerfCurrentCount,
```

```
        sonetFarEndVTCurrentCVs          PerfCurrentCount,
```

```
        sonetFarEndVTCurrentUASS         PerfCurrentCount
```

```
    }
```

```
sonetFarEndVTCurrentESS OBJECT-TYPE
```

```
    SYNTAX PerfCurrentCount
```

```
    MAX-ACCESS read-only
```

```
    STATUS current
```

```
    DESCRIPTION
```

```
        "The counter associated with the number of Far
        End Errored Seconds encountered by a SONET/SDH
        interface in the current 15 minute interval."
```

```
    ::= { sonetFarEndVTCurrentEntry 1 }
```

```
sonetFarEndVTCurrentSESS OBJECT-TYPE
```

```
    SYNTAX PerfCurrentCount
```

```
    MAX-ACCESS read-only
```

```
    STATUS current
```

```
    DESCRIPTION
```

```
        "The counter associated with the number of
        Far End Severely Errored Seconds
        encountered by a SONET/SDH VT interface
        in the current 15 minute
        interval."
```

```
 ::= { sonetFarEndVTCurrentEntry 2 }

sonetFarEndVTCurrentCVs OBJECT-TYPE
    SYNTAX  PerfCurrentCount
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "The counter associated with the number of
        Far End Coding Violations reported via
        the far end block error count
        encountered by a
        SONET/SDH VT interface
        in the current 15 minute interval."
    ::= { sonetFarEndVTCurrentEntry 3 }

sonetFarEndVTCurrentUASSs OBJECT-TYPE
    SYNTAX  PerfCurrentCount
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "The counter associated with the number of
        Far End Unavailable Seconds
        encountered by a
        SONET/SDH VT interface
        in the current 15 minute interval."
    ::= { sonetFarEndVTCurrentEntry 4 }

-- The SONET/SDH Far End VT Interval Table

-- The SONET/SDH Far End VT Interval Table
-- contains various statistics
-- collected by each system over a maximum
-- of the previous 24 hours of
-- operation.  The past 24 hours may be broken into 96
-- completed 15 minute intervals.
-- A system is required to store at
-- least 4 completed 15 minute interval.
-- The default value is 32 intervals.

sonetFarEndVTIntervalTable OBJECT-TYPE
    SYNTAX  SEQUENCE OF SonetFarEndVTIntervalEntry
    MAX-ACCESS  not-accessible
    STATUS  current
    DESCRIPTION
        "The SONET/SDH Far End VT Interval table."
    ::= { sonetFarEndVT 2 }
```

```

sonetFarEndVTIntervalEntry OBJECT-TYPE
    SYNTAX  SonetFarEndVTIntervalEntry
    MAX-ACCESS  not-accessible
    STATUS  current
    DESCRIPTION
        "An entry in the SONET/SDH Far
        End VT Interval table."
    INDEX   { ifIndex,
              sonetFarEndVTIntervalNumber }
    ::= { sonetFarEndVTIntervalTable 1 }

SonetFarEndVTIntervalEntry ::=
    SEQUENCE {
        sonetFarEndVTIntervalNumber      Integer32,
        sonetFarEndVTIntervalESSs        PerfIntervalCount,
        sonetFarEndVTIntervalSESSs       PerfIntervalCount,
        sonetFarEndVTIntervalCVs         PerfIntervalCount,
        sonetFarEndVTIntervalUASSs       PerfIntervalCount,
        sonetFarEndVTIntervalValidData   TruthValue
    }

sonetFarEndVTIntervalNumber OBJECT-TYPE
    SYNTAX  Integer32 (1..96)
    MAX-ACCESS  not-accessible
    STATUS  current
    DESCRIPTION
        "A number between 1 and 96, which identifies the
        interval for which the set of statistics is available.
        The interval identified by 1 is the most recently
        completed 15 minute interval,
        and the interval identified
        by N is the interval immediately preceding the
        one identified
        by N-1."
    ::= { sonetFarEndVTIntervalEntry 1 }

sonetFarEndVTIntervalESSs OBJECT-TYPE
    SYNTAX  PerfIntervalCount
    MAX-ACCESS  read-only
    STATUS  current
    DESCRIPTION
        "The counter associated with the number of
        Far End Errored Seconds encountered
        by a SONET/SDH VT interface
        in a particular 15-minute interval
        in the past 24 hours."
    ::= { sonetFarEndVTIntervalEntry 2 }

```

**sonetFarEndVTIntervalSESS OBJECT-TYPE**

SYNTAX PerfIntervalCount

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The counter associated with the number of Far End Severely Errored Seconds encountered by a SONET/SDH VT interface in a particular 15-minute interval in the past 24 hours."

::= { sonetFarEndVTIntervalEntry 3 }

**sonetFarEndVTIntervalCVs OBJECT-TYPE**

SYNTAX PerfIntervalCount

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The counter associated with the number of Far End Coding Violations reported via the far end block error count encountered by a SONET/SDH VT interface in a particular 15-minute interval in the past 24 hours."

::= { sonetFarEndVTIntervalEntry 4 }

**sonetFarEndVTIntervalUASS OBJECT-TYPE**

SYNTAX PerfIntervalCount

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"The counter associated with the number of Far End Unavailable Seconds encountered by a SONET/SDH VT interface in a particular 15-minute interval in the past 24 hours."

::= { sonetFarEndVTIntervalEntry 5 }

**sonetFarEndVTIntervalValidData OBJECT-TYPE**

SYNTAX TruthValue

MAX-ACCESS read-only

STATUS current

DESCRIPTION

"This variable indicates if the data for this interval is valid."

::= { sonetFarEndVTIntervalEntry 6 }

```
-- conformance information

sonetConformance OBJECT IDENTIFIER ::= { sonetMIB 4 }

sonetGroups          OBJECT IDENTIFIER ::= { sonetConformance 1 }
sonetCompliances OBJECT IDENTIFIER ::= { sonetConformance 2 }

-- deprecated compliance statement

sonetCompliance MODULE-COMPLIANCE
    STATUS deprecated
    DESCRIPTION
        "The compliance statement for SONET/SDH interfaces."

MODULE -- this module
    MANDATORY-GROUPS { sonetMediumStuff, sonetSectionStuff }

    GROUP          sonetLineStuff
    DESCRIPTION
        "Implementation of this group is mandatory for all
        SONET/SDH systems that terminate SONET/SDH Lines,
        Paths or Virtual Tributaries."

    GROUP          sonetFarEndLineStuff
    DESCRIPTION
        "Implementation of this group is optional for all
        SONET/SDH systems that terminate SONET/SDH Lines,
        Paths or Virtual Tributaries, and that
        provide for a far end block error (FEBE)
        information at the SONET/SDH Line Layer."

    GROUP          sonetPathStuff
    DESCRIPTION
        "Implementation of this group is mandatory for all
        SONET/SDH systems that terminate SONET/SDH
        Paths or Virtual Tributaries."

    OBJECT          sonetPathCurrentWidth
    MIN-ACCESS      read-only
    DESCRIPTION
        "Write access is not required."

    GROUP          sonetFarEndPathStuff
    DESCRIPTION
        "Implementation of this group is optional for all
        SONET/SDH systems that terminate SONET/SDH
        Paths or Virtual Tributaries, and that process
        Far End information."
```



```

GROUP          sonetVTStuff
DESCRIPTION
    "Implementation of this group is mandatory for all
    SONET/SDH systems that terminate SONET/SDH Virtual
    Tributaries."

OBJECT          sonetVTCurrentWidth
MIN-ACCESS      read-only
DESCRIPTION
    "Write access is not required."

GROUP          sonetFarEndVTStuff
DESCRIPTION
    "Implementation of this group is optional for all
    SONET/SDH systems that terminate the SONET/SDH
    floating Virtual Tributaries, and that process
    Far End information."

::= { sonetCompliances 1 }

-- current compliance statements

sonetCompliance2 MODULE-COMPLIANCE
    STATUS      current
    DESCRIPTION
        "The compliance statement for SONET/SDH interfaces."

MODULE -- this module
    MANDATORY-GROUPS { sonetMediumStuff2, sonetSectionStuff2 }

    OBJECT      sonetMediumType
    MIN-ACCESS   read-only
    DESCRIPTION
        "Write access is not required."

    OBJECT      sonetMediumLineCoding
    MIN-ACCESS   read-only
    DESCRIPTION
        "Write access is not required."

    OBJECT      sonetMediumLineType
    MIN-ACCESS   read-only
    DESCRIPTION
        "Write access is not required."

    OBJECT      sonetMediumCircuitIdentifier
    MIN-ACCESS   read-only
    DESCRIPTION

```

"Write access is not required."

OBJECT       sonetMediumLoopbackConfig  
MIN-ACCESS   read-only  
DESCRIPTION

"Write access is not required."

OBJECT       sonetSESthresholdSet  
MIN-ACCESS   read-only  
DESCRIPTION

"Write access is not required, and only one  
of the enumerated values need be supported."

GROUP        sonetLineStuff2  
DESCRIPTION

"Implementation of this group is mandatory for all  
SONET/SDH systems that terminate SONET/SDH Lines,  
Paths or Virtual Tributaries."

GROUP        sonetFarEndLineStuff2  
DESCRIPTION

"Implementation of this group is optional for all  
SONET/SDH systems that terminate SONET/SDH Lines,  
Paths or Virtual Tributaries, and that  
provide for a far end block error (FEBE)  
information at the SONET/SDH Line Layer."

GROUP        sonetPathStuff2  
DESCRIPTION

"Implementation of this group is mandatory for all  
SONET/SDH systems that terminate SONET/SDH  
Paths or Virtual Tributaries."

OBJECT       sonetPathCurrentWidth  
MIN-ACCESS   read-only  
DESCRIPTION

"Write access is not required."

GROUP        sonetFarEndPathStuff2  
DESCRIPTION

"Implementation of this group is optional for all  
SONET/SDH systems that terminate SONET/SDH  
Paths or Virtual Tributaries, and that process  
Far End information."

GROUP        sonetVTStuff2  
DESCRIPTION

"Implementation of this group is mandatory for all

SONET/SDH systems that terminate SONET/SDH Virtual Tributaries."

OBJECT sonetVTCurrentWidth  
 MIN-ACCESS read-only  
 DESCRIPTION  
 "Write access is not required."

GROUP sonetFarEndVTStuff2  
 DESCRIPTION  
 "Implementation of this group is optional for all SONET/SDH systems that terminate the SONET/SDH floating Virtual Tributaries, and that process Far End information."

::= { sonetCompliances 2 }

-- units of conformance

-- deprecated groups

sonetMediumStuff OBJECT-GROUP  
 OBJECTS { sonetMediumType,  
 sonetMediumTimeElapsed,  
 sonetMediumValidIntervals,  
 sonetMediumLineCoding,  
 sonetMediumLineType,  
 sonetMediumCircuitIdentifier }  
 STATUS deprecated  
 DESCRIPTION  
 "A collection of objects providing configuration information applicable to all SONET/SDH interfaces."  
 ::= { sonetGroups 1 }

sonetSectionStuff OBJECT-GROUP  
 OBJECTS { sonetSectionCurrentStatus,  
 sonetSectionCurrentESS,  
 sonetSectionCurrentSESSs,  
 sonetSectionCurrentSEFSSs,  
 sonetSectionCurrentCVs,  
 sonetSectionIntervalESSs,  
 sonetSectionIntervalSESSs,  
 sonetSectionIntervalSEFSSs,  
 sonetSectionIntervalCVs  
 }  
 STATUS deprecated  
 DESCRIPTION  
 "A collection of objects providing information

```

        specific to SONET/SDH Section interfaces."
 ::= { sonetGroups 2 }

sonetLineStuff      OBJECT-GROUP
  OBJECTS { sonetLineCurrentStatus,
             sonetLineCurrentESS,
             sonetLineCurrentSESS,
             sonetLineCurrentCVs,
             sonetLineCurrentUASS,
             sonetLineIntervaleSS,
             sonetLineIntervalSESS,
             sonetLineIntervalCVs,
             sonetLineIntervalUASS }
  STATUS deprecated
  DESCRIPTION
    "A collection of objects providing information
     specific to SONET/SDH Line interfaces."
 ::= { sonetGroups 3 }

sonetFarEndLineStuff OBJECT-GROUP
  OBJECTS { sonetFarEndLineCurrentESS,
             sonetFarEndLineCurrentSESS,
             sonetFarEndLineCurrentCVs,
             sonetFarEndLineCurrentUASS,
             sonetFarEndLineIntervaleSS,
             sonetFarEndLineIntervalSESS,
             sonetFarEndLineIntervalCVs,
             sonetFarEndLineIntervalUASS }
  STATUS deprecated
  DESCRIPTION
    "A collection of objects providing information
     specific to SONET/SDH Line interfaces,
     and maintaining Line Far End information."
 ::= { sonetGroups 4 }

sonetPathStuff      OBJECT-GROUP
  OBJECTS { sonetPathCurrentWidth,
             sonetPathCurrentStatus,
             sonetPathCurrentESS,
             sonetPathCurrentSESS,
             sonetPathCurrentCVs,
             sonetPathCurrentUASS,
             sonetPathIntervaleSS,
             sonetPathIntervalSESS,
             sonetPathIntervalCVs,
             sonetPathIntervalUASS }
  STATUS deprecated
  DESCRIPTION

```

"A collection of objects providing information  
specific to SONET/SDH Path interfaces."  
::= { sonetGroups 5 }

sonetFarEndPathStuff      OBJECT-GROUP  
    OBJECTS { sonetFarEndPathCurrentESs,  
              sonetFarEndPathCurrentSESSs,  
              sonetFarEndPathCurrentCVs,  
              sonetFarEndPathCurrentUASSs,  
              sonetFarEndPathIntervaleSSs,  
              sonetFarEndPathIntervalSESSs,  
              sonetFarEndPathIntervalCVs,  
              sonetFarEndPathIntervalUASSs }  
    STATUS deprecated  
    DESCRIPTION  
        "A collection of objects providing information  
        specific to SONET/SDH Path interfaces,  
        and maintaining Path Far End information."  
    ::= { sonetGroups 6 }

sonetVTStuff      OBJECT-GROUP  
    OBJECTS { sonetVTCurrentWidth,  
              sonetVTCurrentStatus,  
              sonetVTCurrentESs,  
              sonetVTCurrentSESSs,  
              sonetVTCurrentCVs,  
              sonetVTCurrentUASSs,  
              sonetVTIntervaleSSs,  
              sonetVTIntervalSESSs,  
              sonetVTIntervalCVs,  
              sonetVTIntervalUASSs }  
    STATUS deprecated  
    DESCRIPTION  
        "A collection of objects providing information  
        specific to SONET/SDH VT interfaces."  
    ::= { sonetGroups 7 }

sonetFarEndVTStuff      OBJECT-GROUP  
    OBJECTS { sonetFarEndVTCurrentESs,  
              sonetFarEndVTCurrentSESSs,  
              sonetFarEndVTCurrentCVs,  
              sonetFarEndVTCurrentUASSs,  
              sonetFarEndVTIntervaleSSs,  
              sonetFarEndVTIntervalSESSs,  
              sonetFarEndVTIntervalCVs,  
              sonetFarEndVTIntervalUASSs }  
    STATUS deprecated  
    DESCRIPTION

```

        "A collection of objects providing information
        specific to SONET/SDH VT interfaces,
        and maintaining VT Far End information."
 ::= { sonetGroups 8 }

-- current groups

sonetMediumStuff2    OBJECT-GROUP
    OBJECTS { sonetMediumType,
               sonetMediumTimeElapsed,
               sonetMediumValidIntervals,
               sonetMediumLineCoding,
               sonetMediumLineType,
               sonetMediumCircuitIdentifier,
               sonetMediumInvalidIntervals,
               sonetMediumLoopbackConfig,
               sonetSESthresholdSet }
    STATUS current
    DESCRIPTION
        "A collection of objects providing configuration
        information applicable to all SONET/SDH interfaces."
 ::= { sonetGroups 9 }

sonetSectionStuff2   OBJECT-GROUP
    OBJECTS { sonetSectionCurrentStatus,
               sonetSectionCurrentESS,
               sonetSectionCurrentSESSs,
               sonetSectionCurrentSEFSSs,
               sonetSectionCurrentCVs,
               sonetSectionIntervalESSs,
               sonetSectionIntervalSESSs,
               sonetSectionIntervalSEFSSs,
               sonetSectionIntervalCVs,
               sonetSectionIntervalValidData }
    STATUS current
    DESCRIPTION
        "A collection of objects providing information
        specific to SONET/SDH Section interfaces."
 ::= { sonetGroups 10 }

sonetLineStuff2      OBJECT-GROUP
    OBJECTS { sonetLineCurrentStatus,
               sonetLineCurrentESS,
               sonetLineCurrentSESSs,
               sonetLineCurrentCVs,
               sonetLineCurrentUASSs,
               sonetLineIntervalESSs,
               sonetLineIntervalSESSs,

```

```

        sonetLineIntervalCVs,
        sonetLineIntervalUASSs,
        sonetLineIntervalValidData }
STATUS    current
DESCRIPTION
    "A collection of objects providing information
    specific to SONET/SDH Line interfaces."
::= { sonetGroups 11 }

sonetPathStuff2    OBJECT-GROUP
    OBJECTS { sonetPathCurrentWidth,
               sonetPathCurrentStatus,
               sonetPathCurrentESSs,
               sonetPathCurrentSESSs,
               sonetPathCurrentCVs,
               sonetPathCurrentUASSs,
               sonetPathIntervalESSs,
               sonetPathIntervalSESSs,
               sonetPathIntervalCVs,
               sonetPathIntervalUASSs,
               sonetPathIntervalValidData }
STATUS    current
DESCRIPTION
    "A collection of objects providing information
    specific to SONET/SDH Path interfaces."
::= { sonetGroups 12 }

sonetVTStuff2    OBJECT-GROUP
    OBJECTS { sonetVTCurrentWidth,
               sonetVTCurrentStatus,
               sonetVTCurrentESSs,
               sonetVTCurrentSESSs,
               sonetVTCurrentCVs,
               sonetVTCurrentUASSs,
               sonetVTIntervalESSs,
               sonetVTIntervalSESSs,
               sonetVTIntervalCVs,
               sonetVTIntervalUASSs,
               sonetVTIntervalValidData }
STATUS    current
DESCRIPTION
    "A collection of objects providing information
    specific to SONET/SDH VT interfaces."
::= { sonetGroups 13 }

sonetFarEndLineStuff2    OBJECT-GROUP
    OBJECTS { sonetFarEndLineCurrentESSs,
               sonetFarEndLineCurrentSESSs,

```

```

        sonetFarEndLineCurrentCVs,
        sonetFarEndLineCurrentUASSs,
        sonetFarEndLineIntervalESSs,
        sonetFarEndLineIntervalSESSs,
        sonetFarEndLineIntervalCVs,
        sonetFarEndLineIntervalUASSs,
        sonetFarEndLineIntervalValidData }
STATUS    current
DESCRIPTION
    "A collection of objects providing information
    specific to SONET/SDH Line interfaces,
    and maintaining Line Far End information."
::= { sonetGroups 14 }

sonetFarEndPathStuff2    OBJECT-GROUP
    OBJECTS { sonetFarEndPathCurrentESSs,
        sonetFarEndPathCurrentSESSs,
        sonetFarEndPathCurrentCVs,
        sonetFarEndPathCurrentUASSs,
        sonetFarEndPathIntervalESSs,
        sonetFarEndPathIntervalSESSs,
        sonetFarEndPathIntervalCVs,
        sonetFarEndPathIntervalUASSs,
        sonetFarEndPathIntervalValidData }
STATUS    current
DESCRIPTION
    "A collection of objects providing information
    specific to SONET/SDH Path interfaces,
    and maintaining Path Far End information."
::= { sonetGroups 15 }

sonetFarEndVTStuff2    OBJECT-GROUP
    OBJECTS { sonetFarEndVTCurrentESSs,
        sonetFarEndVTCurrentSESSs,
        sonetFarEndVTCurrentCVs,
        sonetFarEndVTCurrentUASSs,
        sonetFarEndVTIntervalESSs,
        sonetFarEndVTIntervalSESSs,
        sonetFarEndVTIntervalCVs,
        sonetFarEndVTIntervalUASSs,
        sonetFarEndVTIntervalValidData }
STATUS    current
DESCRIPTION
    "A collection of objects providing information
    specific to SONET/SDH VT interfaces,
    and maintaining VT Far End information."
::= { sonetGroups 16 }

```



END

## 5. Acknowledgments

This specification is a product of the ATOM MIB Working Group. The author would like to acknowledge Mike Heard for his many valuable contributions to this memo.

## 6. Security Considerations

There are a number of management objects defined in this MIB module that have a MAX-ACCESS clause of read-write: sonetMediumType, sonetMediumLineCoding, sonetMediumLineType, sonetMediumCircuitIdentifier, sonetMediumLoopbackConfig, sonetSESthresholdSet, sonetPathCurrentWidth, and sonetVTCurrentWidth. It is possible for writes to these objects to have disruptive effects on network operation that range from invalid performance data to traffic interruptions. Users of this MIB module must therefore be aware that support for SET operations in a non-secure environment without proper protection can have a negative effect on network operations.

The readable objects in this MIB module (i.e., the objects with a MAX-ACCESS other than not-accessible) may be considered sensitive in some environments since, collectively, they provide extensive information about the performance of interfaces in SONET/SDH equipment or networks and can reveal some aspects of their configuration. In such environments it is important to control even GET and NOTIFY access to these objects and possibly to encrypt the values of these objects when sending them over the network via SNMP.

SNMP versions prior to SNMPv3 did not include adequate security. Even if the network itself is secure (for example by using IPsec), even then, there is no control as to who on the secure network is allowed to access and GET/SET (read/change/create/delete) the objects in this MIB module.

It is RECOMMENDED that implementers consider the security features as provided by the SNMPv3 framework (see [RFC3410], section 8), including full support for the SNMPv3 cryptographic mechanisms (for authentication and privacy).

Further, deployment of SNMP versions prior to SNMPv3 is NOT RECOMMENDED. Instead, it is RECOMMENDED to deploy SNMPv3 and to enable cryptographic security. It is then a customer/operator responsibility to ensure that the SNMP entity giving access to an

instance of this MIB module is properly configured to give access to the objects only to those principals (users) that have legitimate rights to indeed GET or SET (change/create/delete) them.

## 7. References

### 7.1. Normative References

- [RFC2119] Bradner, S., "Key words for use in RFCs to Indicate Requirements Levels", BCP 14, RFC 2119, March 1997.
- [RFC2578] McCloghrie, K., Perkins, D. and J. Schoenwaelder, "Structure of Management Information Version 2 (SMIv2)", STD 58, RFC 2578, April 1999.
- [RFC2579] McCloghrie, K., Perkins, D. and J. Schoenwaelder, "Textual Conventions for SMIv2", STD 58, RFC 2579, April 1999.
- [RFC2580] McCloghrie, K., Perkins, D. and J. Schoenwaelder, "Conformance Statements for SMIv2", STD 58, RFC 2580, April 1999.
- [RFC3593] Tesink, K., "Textual Conventions for MIB Modules Using Performance History Based on 15 Minute Intervals", RFC 3593, September 2003.
- [T1.105a] American National Standard for Telecommunications - Digital Hierarchy - Optical Interface Rates and Formats Specification, ANSI T1.105-1988.
- [T1.105b] American National Standard for Telecommunications - Digital Hierarchy - Optical Interface Rates and Formats Specification, ANSI T1.105-1991.
- [T1.106] American National Standard for Telecommunications - Digital Hierarchy - Optical Interface Specification (Single-Mode), ANSI T1.106-1988.
- [T1M1.3] Draft American National Standard for Telecommunications - Digital Hierarchy - Layer 1 In-Service Digital Transmission Performance Monitoring, T1M1.3/93-005R2, July 1993.
- [G.707] CCITT Recommendation G.707, "Synchronous Digital Hierarchy Bit Rates", June 1992.

- [G.708] CCITT Recommendation G.708, "Network Node Interface for the Synchronous Digital Hierarchy", June 1992.
- [G.709] CCITT Recommendation G.709, "Synchronous Multiplexing Structure", June 1992.
- [G.783] CCITT Recommendation G.783, "Characteristics of Synchronous Digital Hierarchy (SDH) Multiplexing Equipment Functional Blocks", November 1992.
- [RFC1213] McCloghrie, K. and M. Rose, "Management Information Base for Network Management of TCP/IP-based internets: MIB-II", RFC 1213, March 1991.
- [RFC2863] McCloghrie, K. and F. Kastenholtz, "The Interfaces Group MIB", RFC 2863, June 2000.
- [RFC2864] McCloghrie, K. and G. Hanson, "The Inverted Stack Table Extension to the Interfaces Group MIB", RFC 2864, June 2000.
- [T1.231a] American National Standard for Telecommunications - Digital Hierarchy - Layer 1 In-Service Digital Transmission Performance Monitoring, ANSI T1.231-1993, September 1993.
- [TR253] Bellcore TR-NWT-000253, Issue 1, "Synchronous Optical Network (SONET) Transport Systems: Common Generic Criteria", December 1991.
- [G.826] ITU Recommendation G.826, "Error Performance Parameters and Objectives for International Constant Bit Rate Digital Paths at or above Primary Rate", September 1995 (COM 13-R57E).
- [GR253] Bellcore GR-253-CORE, Issue 2, "Synchronous Optical Network (SONET) Transport Systems Common Generic Criteria", December 1995.
- [T1.231b] American National Standard for Telecommunications - Digital Hierarchy - Layer 1 In-Service Digital Transmission Performance Monitoring, ANSI T1.231-1997, September 1997.

## 7.2. Informative References

- [RFC1595] Brown, T. and K. Tesink, "Definitions of Managed Objects for the SONET/SDH Interface Type", RFC 1595, March 1994.
- [RFC2495] Fowler, D., "Definitions of Managed Objects for the DS1, E1, DS2 and E2 Interface Types", RFC 2495, January 1999.
- [RFC2496] Fowler, D., "Definitions of Managed Objects for the DS3/E3 Interface Type", RFC 2496, January 1999.
- [RFC2558] Tesink, K., "Definitions of Managed Objects for the SONET/SDH Interface Type", RFC 2558, March 1999.
- [RFC3410] Case, J., Mundy, R., Partain, D. and B. Stewart, "Introduction and Applicability Statements for Internet-Standard Management Framework", RFC 3410, December 2002.

## 8. Intellectual Property Statement

The IETF takes no position regarding the validity or scope of any intellectual property or other rights that might be claimed to pertain to the implementation or use of the technology described in this document or the extent to which any license under such rights might or might not be available; neither does it represent that it has made any effort to identify any such rights. Information on the IETF's procedures with respect to rights in standards-track and standards-related documentation can be found in BCP-11. Copies of claims of rights made available for publication and any assurances of licenses to be made available, or the result of an attempt made to obtain a general license or permission for the use of such proprietary rights by implementors or users of this specification can be obtained from the IETF Secretariat.

The IETF invites any interested party to bring to its attention any copyrights, patents or patent applications, or other proprietary rights which may cover technology that may be required to practice this standard. Please address the information to the IETF Executive Director.

## Appendix A: The delay-line approach to statistics collection.

According to ANSI T1.231 unavailable time begins at the onset of 10 contiguous severely errored seconds -- that is, unavailable time starts with the first of the 10 contiguous SESs -- and while an interface is deemed unavailable all counters for that interface are frozen except for the UAS count. Since changes in the signal state lag the data to which they apply by 10 seconds, an implementation which wishes to avoid making retroactive adjustments to the counts must pass the the one-second statistics through a 10-second delay line prior to updating any counters. That can be done by performing the following steps at the end of each one second interval.

- i) Read near/far end line and path CV counts and alarm status flags from the hardware.
- ii) Accumulate the CV counts for the preceding second and compare them to the ES and SES threshold for the layer in question. Update the signal state and shift the one-second CV counts and ES/SES flags into the 10-element delay line. Note that far-end one-second statistics are to be flagged as "absent" during any second in which there is an incoming defect at the layer in question or at any lower layer.
- iii) Update the current interval statistics using the signal state from the previous update cycle and the one-second CV counts and ES/SES flags shifted out of the 10-element delay line.

This procedure guarantees that the statistical counters will be correctly updated at all times, although they lag real time by 10 seconds. It is illustrated in the figure below. At the end of each 15 minutes interval the current interval counts are transferred to the most recent interval entry and each interval is shifted up by one position, with the oldest being discarded if necessary in order to make room. The current interval counts then start over from zero. Note, however, that the signal state calculation does not start anew at each interval boundary; rather, signal state information is retained across interval boundaries.

READ COUNTERS & STATUS INFO FROM HARDWARE															
LOS	OOF/ LOF	SECT CV	LINE AIS	LINE CV	LINE RDI	LINE FEBE	PATH AIS	PATH LOP	PATH CV	PATH RDI	PATH CV				
V	V	V	V	V	V	V	V	V	V	V	V				
ACCUM ONE-SEC STATS, CHK ERR THRESHOLDS, & UPDT SIGNAL STATE															
			NEAR END/FAR END				NEAR END/FAR END								
SECT CV	SECT ES	SECT SES	LINE CV	LINE ES	LINE SES	LINE AVA/UNA	PATH CV	PATH ES	PATH SES	PATH AVA/UNA					
V	V	V	V	V	V		V	V	V						
+-----+-----+-----+			+-----+-----+-----+				+-----+-----+-----+								
ONE-SEC DELAY (1 OF 10)			ONE-SEC DELAY (1 OF 10)				ONE-SEC DELAY (1 OF 10)								
CV	ES	SES	CV	ES	SES		CV	ES	SES						
+-----+-----+-----+			+-----+-----+-----+				+-----+-----+-----+								
/	/	/	/	/	/	/	/	/	/	/	/				
V	V	V	V	V	V		V	V	V						
+-----+-----+-----+			+-----+-----+-----+				+-----+-----+-----+								
ONE-SEC DELAY (10 OF 10)			ONE-SEC DELAY (10 OF 10)				ONE-SEC DELAY (10 OF 10)								
CV	ES	SES	CV	ES	SES		CV	ES	SES						
+-----+-----+-----+			+-----+-----+-----+				+-----+-----+-----+								
V	V	V	V	V	V	V	V	V	V	V	V				
UPDATE STATISTICS COUNTERS															
SECTION			NEAR END/FAR END					NEAR END/FAR END							
LINE			LINE					PATH							
CV	ES	EFS	SES	CV	ES	EFS	SES	AS	UAS	CV	ES	EFS	SES	AS	UAS

Note that if such a procedure is adopted there is no current interval data for the first ten seconds after a system comes up.

noSuchInstance must be returned if a management station attempts to access the current interval counters during this time.

It is an implementation-specific matter whether an agent assumes that the initial state of the interface is available or unavailable.

#### Appendix B - RFC 1595 SES interpretation

This appendix contains the values for x for the Section, Line, Path, and VT Layers as used in [T1M1.3][RFC1595][TR253].

##### Value for x for SONET/SDH Section SES Definition

Rate	x	Minimum Bit Error Rate
=====		
OC-1	9	$1.5 \times 10^{-7}$
OC-3	16	$1 \times 10^{-7}$
OC-9	47	$1 \times 10^{-7}$
OC-12	63	$1 \times 10^{-7}$
OC-18	94	$1 \times 10^{-7}$
OC-24	125	$1 \times 10^{-7}$
OC-36	187	$1 \times 10^{-7}$
OC-48	249	$1 \times 10^{-7}$

##### Value for x for SONET/SDH Line SES Definition

Rate	x	Minimum Bit Error Rate
=====		
OC-1	12	$2 \times 10^{-7}$
OC-3	32	$2 \times 10^{-7}$
OC-9	47	$2 \times 10^{-7}$
OC-12	124	$2 \times 10^{-7}$
OC-18	186	$2 \times 10^{-7}$
OC-24	248	$2 \times 10^{-7}$
OC-36	370	$2 \times 10^{-7}$
OC-48	494	$2 \times 10^{-7}$

##### Value for x for SONET/SDH STS-Path SES Definition

Rate	x	Minimum Bit Error Rate
=====		
STS-1	9	$1.5 \times 10^{-7}$
STS-3	16	$1 \times 10^{-7}$

## Value for x for SONET/SDH VT-Path SES Definition

Rate	x	Minimum Bit Error Rate
=====		
VT1.5	4	$2 \times 10^{-6}$
VT2	6	$2 \times 10^{-6}$
VT3	8	$2 \times 10^{-6}$
VT6	14	$2 \times 10^{-6}$

## Author's Address

Kaj Tesink  
Telcordia Technologies  
331 Newman Springs Road  
P.O. Box 7020  
Red Bank, NJ 07701-7020

Phone: (732) 758-5254  
EMail: kaj@research.telcordia.com



## Full Copyright Statement

Copyright (C) The Internet Society (2003). All Rights Reserved.

This document and translations of it may be copied and furnished to others, and derivative works that comment on or otherwise explain it or assist in its implementation may be prepared, copied, published and distributed, in whole or in part, without restriction of any kind, provided that the above copyright notice and this paragraph are included on all such copies and derivative works. However, this document itself may not be modified in any way, such as by removing the copyright notice or references to the Internet Society or other Internet organizations, except as needed for the purpose of developing Internet standards in which case the procedures for copyrights defined in the Internet Standards process must be followed, or as required to translate it into languages other than English.

The limited permissions granted above are perpetual and will not be revoked by the Internet Society or its successors or assigns.

This document and the information contained herein is provided on an "AS IS" basis and THE INTERNET SOCIETY AND THE INTERNET ENGINEERING TASK FORCE DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTY THAT THE USE OF THE INFORMATION HEREIN WILL NOT INFRINGE ANY RIGHTS OR ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

## Acknowledgement

Funding for the RFC Editor function is currently provided by the Internet Society.

